

TREK

CCSDS FILE DELIVERY PROTOCOL
(CFDP)

USER GUIDE



October 2016

Approved for Public Release; Distribution is Unlimited.

TABLE OF CONTENTS

<u>PARAGRAPH</u>	<u>PAGE</u>
1 Welcome.....	1
1.1 Getting Started	1
1.2 System Requirements.....	1
2 Technical Support.....	1
3 Introduction.....	2
4 Overview of the User Interface.....	6
4.1 Main Window	6
4.2 Toolbar.....	7
4.3 Menus.....	8
5 Quick Start Guides	9
5.1 How to Configure the Application for Native CFDP	9
5.2 How to Configure the Application for ION CFDP	9
5.3 How to Configure Application Defaults	9
5.4 Drag and Drop Features	10
5.5 How to Save a CFDP Command List.....	10
5.6 How to Start and Stop the CFDP Service.....	11
5.7 How to Put (Send) a File	11
5.8 How to Get (Retrieve) a File	12
5.9 How to Monitor File Transfers.....	12
5.10 How to Configure the Transactions Area	12
5.11 How to Turn on Message Logging	13
5.12 How to Turn on Statistics Logging.....	13
5.13 How to Turn on Metrics Logging.....	14
5.14 How to Use the CFDP Command Line in Native CFDP Mode	14
5.15 How to Use the CFDP Command Line in ION CFDP Mode	16
6 Details.....	19
6.1 Configuration	19
6.1.1 Native CFDP Tab	19
6.1.2 ION CFDP Tab.....	23
6.1.3 Options Tab	26
6.2 Transactions	29
6.2.1 Configure Transactions Columns Dialog	30
6.3 Statistics	31
6.4 Metrics	33
6.5 Configure Message Logging	35
6.6 Configure Statistics Logging.....	35
6.7 Application Messages	36
6.8 Application Configuration File	38
6.9 Application Settings	38
7 FAQ and Troubleshooting	38
7.1 Is There an Easy Way to Transfer the Contents of a Directory?	38
7.2 What is class1 and class2?	39
7.3 What is “///”?.....	39

7.4	Source and Destination Constraints	39
7.5	I Dropped My File into the List and it Turned Red.....	39
7.6	My File Starts to Transfer and Then Stops.....	39
7.7	Transfer Results When Item Exists At Destination.....	40
7.8	Important Things To Know When Using The Get Primitive	40
7.9	How Does Pause Transactions Work?	40
7.10	CFDP Transactions in an AOS/LOS Environment.....	41

FIGURES

<u>FIGURE</u>	<u>PAGE</u>
Figure 1 CFDP Sender and Receiver	2
Figure 2 Main Window	6
Figure 3 Configure Dialog (Native CFDP Tab)	20
Figure 4 Configure Dialog (ION CFDP Tab)	24
Figure 5 Configure Dialog (Options Tab)	27
Figure 6 Configure Transactions Columns Dialog	30
Figure 7 Configure Message Logging Dialog	35
Figure 8 Configure Statistics Logging Dialog	36
Figure 9 Messages Dialog	37
Figure 10 Configure Messages Dialog	37
Figure 11 Clear Messages Dialog	37

1 Welcome

The Telescience Resource Kit (TReK) is a suite of software applications and libraries that can be used to monitor and control assets in space or on the ground.

The TReK CFDP application provides the capability to transfer files using the Consultative Committee for Space Data Systems (CCSDS) File Delivery Protocol (CFDP).

1.1 Getting Started

Start with the Introduction which provides an application overview. Next, try the Quick Start Guides for “How Tos” for common functions. For help with details, reference the Details section. See the FAQ and Troubleshooting section for helpful hints and solutions to the common “gotchas”.

1.2 System Requirements

Windows 7, Red Hat Enterprise Linux 6.x.

2 Technical Support

If you are having trouble installing the TReK software or using any of the TReK software applications, please try the following suggestions:

Read the corresponding material in the manual and/or on-line help.

Ensure that you are correctly following all instructions.

Checkout the TReK Web site at <http://trek.msfc.nasa.gov/> for Frequently Asked Questions.

If you are still unable to resolve your difficulty, please contact us for technical assistance:

TReK Help Desk E-Mail, Phone & Fax:

E-Mail:	trek.help@nasa.gov
Telephone:	256-544-3521 (7:00 a.m. - 3:30 p.m. Central Time)
Fax:	256-544-9353

TReK Help Desk hours are 7:00 a.m. – 3:30 p.m. Central Time Monday through Friday. If you call the TReK Help Desk and you get a recording please leave a message and someone will return your call. E-mail is the preferred contact method for help. The e-

mail message is automatically forwarded to the TReK developers and helps cut the response time.

3 Introduction

The TReK CFDP application provides the capability to transfer files using the Consultative Committee for Space Data Systems (CCSDS) File Delivery Protocol (CFDP).

The CCSDS File Delivery Protocol (CFDP) was developed by the Consultative Committee for Space Data Systems (CCSDS). Official specifications are contained in a CCSDS document called the CFDP Blue Book (available at www.ccsds.org). The CFDP protocol provides reliable transfer of files from one computer to another, and has been designed to work well over space links. It can be used to perform space to ground, ground to space, space to space, and ground to ground file transfers.

CFDP requires a sender and a receiver. The sender and receiver must be configured and running at the same time to perform a file transfer. Each party is referred to as an “Entity”. The sender is an entity and the receiver is an entity. Each “Entity” must have a unique Entity ID. For example:



Figure 1 CFDP Sender and Receiver

To move a file from one computer to another, you will enter one or more CFDP Commands (primitives) to indicate the action to be taken. The syntax of a primitive is as follows:

[CFDP Directive] [Transmission] [source-path] [remote-EID] [destination-path]

The TReK CFDP application provides support for CFDP over User Datagram Protocol (UDP) and CFDP over Bundle Protocol (BP) using the Jet Propulsion Lab (JPL) Interplanetary Overlay Network (ION) Delay Tolerant Networking software. The CFDP over UDP configuration option is referred to as Native CFDP. The CFDP over BP configuration option is referred to as ION CFDP. In the Native CFDP configuration, the application uses UDP sockets and a Goddard Space Flight Center (GSFC) CFDP library that performs the CFDP work. In the ION CFDP configuration, the TReK CFDP application communicates with the ION software which performs the CFDP work.

There are differences in capabilities and syntax between the CFDP Native mode and the ION CFDP mode. These differences are summarized below.

Native CFDP Configuration

The syntax of a primitive is as follows:

[CFDP Directive] [Transmission] [source-path] [remote-EID] [destination-path]

Native CFDP Example: put class2 "D:\file1.txt" 2 "/home/kirk/file1.txt"

The TReK CFDP application currently supports multiple CFDP Directives for both Native and ION CFDP modes. These are defined in the CFDP Directives section below.

Valid Transmission values are class1 or class2. Class1 does not guarantee reliable delivery of the file to the destination. Class2 does ensure reliable delivery.

The file you want to transfer is considered the "Source" and the location it should be transferred to is considered the "Destination".

When entering a Source or Destination in a CFDP command line, it must be encapsulated in double quotes.

ION CFDP Configuration

The syntax of a primitive is as follows:

[CFDP Directive] [Transmission] [source-path] [remote-EID] [destination-path]

ION CFDP Example: put //// "D:\file1.txt" 2 "/home/kirk/file1.txt"

The TReK CFDP application currently supports multiple CFDP Directives for both Native and ION CFDP modes. These are defined in the CFDP Directives section below.

The Transmission entry for ION CFDP is composed of five properties. Once these properties are configured, a "////" string is used to indicate that the pre-configured values should be used. The "////" nomenclature is shorthand notation for the following combination of values:

Lifespan/Bundle Protocol Class of Service/Expedited Priority Ordinal/Transmission Mode/Criticality

When the values are empty it indicates that pre-configured values should be used for these properties.

A summary of the Transmission properties is provided below. For details, please reference section 6.1.2.

Property	Description
Lifespan	The lifespan is the bundle's "time to live" (TTL) in seconds. The bundle is destroyed if its TTL has expired and it has not reached its destination.

Bundle Protocol Class of Service	The Bundle Protocol Class of Service defines the transmission priority of outbound bundles from three ION priority queues corresponding to bulk, standard, and expedited priorities. The expedited priority queue must be empty before bundles in the standard or bulk queues are serviced by ION. Therefore, bundles with expedited priority should only be sent in critical/emergency situations.
Expedited Priority Ordinal	The expedited priority ordinal is only associated with the expedited priority class of service.
Transmission Mode	The transmission mode defines the reliability of bundle delivery to a destination. The three transmission modes supported are best effort, assured, and assured with custody transfer.
Criticality	A critical bundle is one that has to reach its destination as soon as is physically possible. For this reason, bundles flagged as critical may not include custody transfer and require an ION configuration with contact graph routing. In some cases, a critical bundle may be sent over multiple routes to ensure delivery to its final destination. Critical bundles are placed in the expedited priority queue and should only be used in emergency situations.

CFDP Directives

The TReK CFDP application currently supports multiple CFDP Directives for both Native and ION CFDP modes. This includes get and put, multiple filestore directives, and the message directive. These are defined as follows:

Directive	Description
append_file	append a file at the remote entity to another file at the remote entity.
create_dir	create a directory at the remote entity.
create_file	create an empty file at the remote entity.
delete_file	delete a file at the remote entity.
deny_dir	delete a directory at the remote entity. (like <i>remove_dir</i> , but does not fail if the directory does not exist. Directory must be empty.)
deny_file	delete a file at the remote entity. (like <i>delete_file</i> , but does not fail if the file does not exist)
get	copy one file from the remote entity to the local entity. (File cannot be empty.)
message	send a text string to the remote entity.
put	copy one file from the local entity to the remote entity. (File cannot be empty.)
remove_dir	delete a directory at the remote entity (directory must be empty).
rename_file	rename a file at the remote entity.

replace_file	replace a file (contents) at the remote entity with another file (contents) at the remote entity.
--------------	---

Some directives only require a Source. The following table describes what is required for Source and Destination for each directive. Name of file, filename, and name of directory refer to an absolute path.

Directive	Source (first file)	Destination (second file)
append_file	name of file whose contents form first part of new file and name of the new file	name of file whose contents will form second part of new file
create_dir	name of directory to be created	
create_file	filename to be created	
delete_file	filename to be deleted	
deny_dir	name of directory to be deleted	
deny_file	filename to be deleted	
get	file or directory name of file(s) to retrieve	file or directory name for file(s) retrieved
message	message	
put	file or directory name of file(s) to send	file or directory name for file(s) sent
remove_dir	Name of directory to be deleted	
rename_file	old filename	new filename
replace_file	filename whose contents are to be replaced	filename whose contents will replace the contents of the first filename

When entering a Source or Destination in a CFDP command line, it must be encapsulated in double quotes.

Note: The Get directive is not supported in all ISS CFDP implementations. It is supported by TReK when both the sender and receiver are TReK CFDP implementations (TReK CFDP application, TReK CFDP console application, or TReK CFDP Library).

TReK also provides the capability to create CFDP dropboxes to push files to a remote destination. The dropboxes are available in both Native and ION CFDP modes. Dropbox configuration parameters include where the dropbox is located and the destination of each file placed in the dropbox.

In addition to this application, TReK also includes a CFDP console application and a CFDP library. If you need CFDP functionality onboard a spacecraft consider the TReK CFDP console application. If you need to include CFDP functionality in your own application, consider the TReK CFDP library. The TReK CFDP library can be used to include CFDP functionality in a ground or flight application.

4 Overview of the User Interface

4.1 Main Window

The main window contains several areas as shown in Figure 2. Each area is a dock window that you can float or dock. To float a dock window, use your left mouse button to click and hold the title area while dragging the window to another area of the screen. To dock, use the title bar to drag the dock window over the main window and drop.

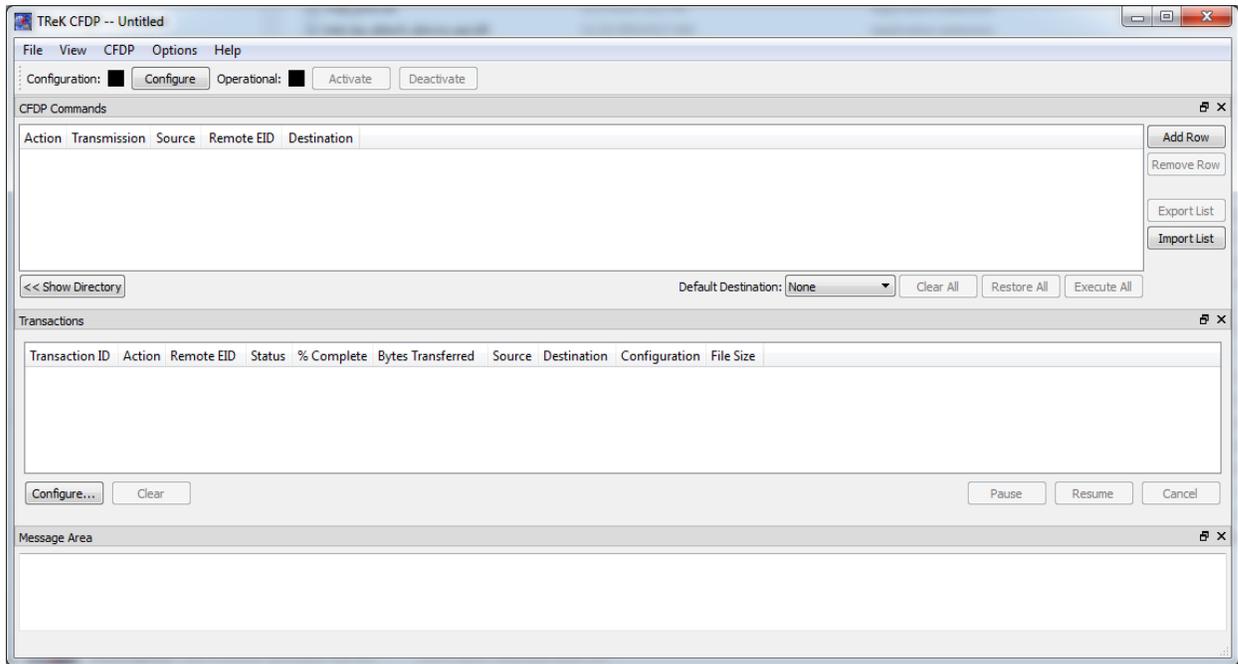


Figure 2 Main Window

Toolbar

The toolbar at the top of the window provides quick access to configure the application and start and stop the CFDP service.

CFDP Commands

The CFDP Commands area provides a way to add and execute one or more CFDP commands (primitives). For example, you can add a “put” command to send a file to a remote entity. The “Show Directory” button provides access to the local file system. Files can be dragged from this view of the local file system or from a file explorer window. Files can also be added by pushing the Add Row button and typing in the file transfer information. To delete a file from the list put your cursor in the row you would like to delete and push the Remove Row button. To delete all files in the list push the Clear All button. The Export List button provides a way to save the list of CFDP Commands in a file. The Import List button provides a way to load a list of CFDP Commands from a file. Each CFDP command entered into the list must include a directive, transmission information, the absolute path of the source file, the Remote Entity ID (Remote EID), and the absolute path of the destination file. To execute all the CFDP commands in the list, push the Execute All button. After you push the Execute All

button, the Restore All button can be used to restore the list of commands. The Restore All button will only restore the list of CFDP commands previously sent by pushing the Execute All button. The Default Destination menu can be used to identify a default destination. This can save typing when dragging and dropping files into the list. If the Default Destination is set, the destination selected will automatically be copied into the Destination field when a file is dropped into the list. The Default Destination menu can be populated using the Configure dialog.

Note: When entering Source and Destination information in the CFDP Commands List, do not wrap the Source and Destination information in double quotes as you do on a CFDP Command Line.

Note 2: You can enter the absolute path for a directory in the Source and Destination fields. All the files in the first level of the directory will be transferred. Subdirectories will not be transferred. Each file in the directory will result in the execution of an individual CFDP Command (primitive). Therefore, the transactions area will contain transaction information for each file transferred.

Note 3: There are two types of configuration files for the CFDP application: the CFDP Application Configuration File and the CFDP Commands List file. File/Save/Save As can be used to save an Application Configuration File. The File/Open command provides a way to open an Application Configuration File. The Export List button provides a way to save a CFDP Commands List file. The Import List button provides a way to load a CFDP Commands List file.

Transactions

The Transactions area displays file transfer activity as it is in progress. The Configure button displays the Configure dialog which provides a way to show and hide columns and rearrange the order of the columns. To Clear, Pause, Resume, or Cancel one or more transactions, select the transactions in the list and push the desired button.

Message Area

The Message Area displays important status and error messages. The message area can be cleared using the View menu.

4.2 Toolbar

The toolbar provides visual information about the state of the application and provides access to common application functions.

Configuration Status

When the Configuration status is black, this indicates the application has not been configured. When the Configuration status is green, this indicates the application has been configured and the CFDP service can be activated.

Use the Configure button to access the Configure dialog to configure the application.

Operational Status

When the Operational status is black, this indicates the CFDP service is inactive. When the Operational status is green, this indicates the CFDP service is active and file transfer is supported. The application must be properly configured before the Activate button will be available. The CFDP service must be active before the Deactivate button will be available.

Use the Activate button to activate the CFDP service. This will initiate all internal activities needed to prepare the application to send and receive files. When you activate the CFDP service, you will see activation status messages in the main window message area. If you need to reconfigure the CFDP application, deactivate the CFDP service, and then push the Configure button to reconfigure.

4.3 Menus

The CFDP application menus are: File, View, CFDP, Options, and Help. Each of these menus is described in more detail below.

File Menu

The File menu provides the capability to manage configurations and exit the application.

View Menu

The View menu provides the capability to clear the main window message area and show and hide different areas in the main window.

CFDP Menu

The CFDP menu provides the capability to configure the application, activate and deactivate the CFDP service, apply Pause, Resume, Cancel, or Clear to all transactions in progress, and Reset Metrics. Reset Metrics can be used to reset all the metrics to 0 in the metrics log file that is currently open. The Metrics log file will only be open when Metrics Logging is on and the CFDP service is active.

Options Menu

The Options menu provides access to the Messages dialog, the Configure Message Logging dialog, the Configure Statistics Logging dialog, and Reset Statistics. The Messages dialog displays application messages. The Configure Message Logging dialog provides the capability to configure message logging. The Configure Statistics Logging dialog provides the capability to configure statistics logging. Reset Statistics can be used to reset all the statistics to 0 in the statistics log file that is currently open. The Statistics log file will only be open when Statistics Logging is on.

Help Menu

The Help menu provides access to on-line help and application version information.

5 Quick Start Guides

This section provides “How Tos” for common functions.

5.1 How to Configure the Application for Native CFDP

The following steps describe the minimum necessary to configure the application. For additional information and details about the Configure dialog please reference section 6.1.

1. Push the Configure button to display the Configure dialog.
2. Select the Native CFDP radio button.
3. Enter your Entity ID in the Local Entity ID field.
4. Push the + button to create a row to enter Remote Entities information. For each remote entity, enter the Remote Entity ID, the Remote IP Address, and Remote Port. You must enter one or more remote entities.
5. Ensure the CFDP Socket Local IP Address contains a valid local IP address.
6. Push the OK button to save the configuration information and exit the dialog.

If the application is configured correctly, the Configuration status will be green.

5.2 How to Configure the Application for ION CFDP

The following steps describe the minimum necessary to configure the application. For additional information and details about the Configure dialog please reference section 6.1.

1. Push the Configure button to display the Configure dialog.
2. Select the ION CFDP radio button.
3. Modify the ION CFDP properties as needed.
4. Push the OK button to save the configuration information and exit the dialog.

If the application is configured correctly, the Configuration status will be green.

5.3 How to Configure Application Defaults

This section describes how to configure application defaults using the Configure dialog Options tab.

1. Push the Configure button to display the Configure dialog.
2. Go to the Options tab.

3. Enter a Default Remote EID. When you drag and drop files into the “CFDP Commands” list or the CFDP Command field, the default Remote EID entered here will automatically be used as the Remote EID.
4. Enter one or more Default Destination Paths. These paths will be added to the Default Destination menu shown on the main window. The Default Destination menu will also contain a "None" item and a "Same As Source" item. When dragging and dropping files, the item selected in the Default Destination menu will determine what is placed in the Destination field. This will work as follows:
 - If "None" is selected the Destination field will be blank.
 - If "Same As Source" is selected, the Source information will be copied into the Destination field.
 - If a path is selected, and you are dragging and dropping a file, the path selected on the Default Destination menu will be copied into the Destination field and appended with the Source filename.
 - If a path is selected, and you are dragging and dropping a directory, the path selected on the Default Destination menu will be copied into the Destination field.
5. Push the OK button to save the configuration information and exit the dialog.

5.4 Drag and Drop Features

Drag and Drop is the fastest way to create a list of CFDP commands to transfer one or more files and/or directories. Simply Drag and Drop one or more files from the Directory area in the CFDP main window (“CFDP Commands” area) or from an Explorer window.

You can optimize your Drag and Drop experience by setting application defaults such as Default Remote EID and Default Destination Paths. To set these defaults see section 5.3.

5.5 How to Save a CFDP Command List

A CFDP Command List can be saved by saving the application configuration using the File menu’s Save/Save As items or by using the Export List button on the Main Window. If the application configuration is saved, the entire application configuration, including the CFDP Command List, will be saved in the configuration file. If the Export List button on the Main Window is used, only the CFDP Command List will be saved in the file.

The File menu’s Open menu item can only open a TReK CFDP Application Configuration file.

The Import List button on the Main Window can only be used to read a CFDP Command List file.

5.6 How to Start and Stop the CFDP Service

This section describes how to start and stop the CFDP service.

1. Before the CFDP service can be started, you must configure the application. To learn more about this see section 5.1. The Configure status must be green before you can start the CFDP service.
2. If you are configured for ION CFDP, you must start the ION software before starting the CFDP service.
3. To start the CFDP service, push the Activate button on the toolbar. If this is successful the Operational status will turn green. When the Operational status is green you can transfer files (send or receive files).
4. To stop the CFDP service, push the Deactivate button.
5. When activating or deactivating important status and/or error messages will be displayed in the Main Window message area.

5.7 How to Put (Send) a File

This section describes how to put (send) a file. This procedure applies to both Native CFDP and ION CFDP.

1. The CFDP application must be configured and the CFDP service must be active.
2. Drag and Drop a file into the “CFDP Commands” area.
3. Ensure the Put, Transmission, Source, Remote EID and Destination information is correct. If the application is configured for Native CFDP, the Transmission should be class1 or class2. If the application is configured for ION CFDP, the Transmission should be “/////”. The “/////” indicates the ION CFDP parameter values defined in the Configure dialog will be used during transmission. The Source should identify the absolute path of the file to be sent. The Remote EID should identify the target Entity. The Destination should identify where to store the file at the target location.
4. Push the Execute All button.

Note: When entering Source and Destination information in the CFDP Commands List, do not wrap the Source and Destination information in double quotes as you do on a CFDP Command Line.

Note 2: If you want to transfer the contents of a directory, you can enter the absolute path for a directory in the Source and Destination fields. All the files in the first level of the directory will be transferred. Subdirectories will not be transferred. Be sure to include a forward slash ‘/’ at the end of the directory path.

If the text is red, this indicates there is problem with the information provided. Until this is corrected it will not be possible to successfully perform the file transfer.

5.8 How to Get (Retrieve) a File

This section describes how to get (retrieve) a file. This procedure applies to both Native CFDP and ION CFDP.

Special Note: ISS Change Request (CR) 13351 Ku-Band Forward Access for Payload Operations only required support for the “Put” directive. Therefore, the Get directive is not supported in all ISS CFDP implementations. It is supported by TReK when both the sender and receiver are TReK CFDP implementations (TReK CFDP application, TReK CFDP console application, or TReK CFDP Library).

1. The CFDP application must be configured and the CFDP service must be active.
2. Enter information into the “CFDP Commands” area for the file you wish to get. Ensure the Get, Transmission, Source, Remote EID, and Destination information is correct. If the application is configured for Native CFDP, the Transmission should be class1 or class2. If the application is configured for ION CFDP, the Transmission should be “/////”. The “/////” indicates the ION CFDP parameter values defined in the Configure dialog will be used during transmission. The Source field should identify the absolute path of the file to be retrieved from the target entity. The Remote EID should identify the target Entity. The Destination field should identify the location (including filename) where you want the file to be stored when retrieved.
3. Push the Execute All button.

Note: When entering Source and Destination information in the CFDP Commands List, do not wrap the Source and Destination information in double quotes as you do on a CFDP Command Line.

Note 2: If you want to transfer the contents of a directory, you can enter the absolute path for a directory in the Source and Destination fields. All the files in the first level of the directory will be transferred. Subdirectories will not be transferred. Be sure to include a forward slash ‘/’ at the end of the directory path.

If the text is red, this indicates there is problem with the information provided. Until this is corrected it will not be possible to successfully perform the file transfer.

5.9 How to Monitor File Transfers

File Transfers can be monitored using the Transactions area in the main window. No transactions will appear until a file transfer is in progress. Transactions will appear when a send or receive is in progress. The details about the file transfer will stay in the Transactions area until they are cleared out.

5.10 How to Configure the Transactions Area

This section describes how to configure the Transactions area.

1. In the Transactions area, push the Configure button to display the Configure Transactions Columns dialog.
2. To show or hide columns, select the column(s) you would like to show or hide and push the arrow buttons to move the columns to the Available list or the Columns Showing list as desired.
3. To order the columns use the Move Up and Move Down buttons to order the list. The top item will be the left most column.
4. Push the OK button to save the configuration and exit.

The Transactions list can be safely configured while transactions are in progress. The configuration is not saved as part of the application configuration.

5.11 How to Turn on Message Logging

This section describes how to turn on message logging. Various types of application messages are generated. As you use the application, messages will be displayed in the main window message area and the Messages dialog. Messages can also be logged to a file by turning on Message Logging. Message Logging will only capture messages generated after Message Logging is turned on. Any messages generated before message logging was turned on will not appear in the message log file.

1. Go to the Options menu and select 'Configure Message Logging'.
2. Check the Log Messages checkbox to turn Message Logging On.
3. Enter a directory for the Log File in the Log File Path field.
4. Enter a name for the Log in the Log File Name field.
5. You can select whether debug messages are written to the Message Log using the Log Debug Messages checkbox.
6. Push OK to save the configuration and exit the Configure Message Logging dialog.

5.12 How to Turn on Statistics Logging

This section describes how to turn on statistics logging. Various types of application statistics are generated. Statistics are generated and captured in memory as you use the application. Statistics can also be logged to a file by turning on Statistics Logging. When Statistics Logging is on, the Statistics Log file provides a snapshot of the application statistics from the time the application started or the last statistics reset.

1. Go to the Options menu and select 'Configure Statistics Logging'.
2. Check the Log Statistics checkbox to turn Statistics Logging On.
3. Enter a directory for the Log File in the Log File Path field.
4. Enter a name for the Log in the Log File Name field.
5. You can select whether packet statistics are written to the Statistics Log using the Log Packet Statistics checkbox.
6. Push OK to save the configuration and exit the Configure Statistics Logging dialog.

5.13 How to Turn on Metrics Logging

This section describes how to turn on metrics logging. Various types of CFDP metrics are generated. Metrics are generated and captured in memory when the CFDP service is active. Metrics can also be logged to a file by turning on Metrics Logging. The Metrics Log file provides a snapshot of the current CFDP metrics starting from the time the CFDP service was activated or the last metrics reset.

1. Go to the CFDP menu and select 'Configure'.
2. In the Configure dialog select the Options tab.
3. Check the Log Metrics checkbox to turn Metrics Logging On.
4. Enter a directory for the Log File in the Log File Path field.
5. Enter a name for the Log in the Log File Name field.
6. Push OK to save the configuration and exit the Configure dialog.

5.14 How to Use the CFDP Command Line in Native CFDP Mode

This section describes how to use the CFDP Command Line when configured for Native CFDP.

Special Note: ISS Change Request (CR) 13351 Ku-Band Forward Access for Payload Operations only required support for the "Put" directive. Therefore, the Get directive is not supported in all ISS CFDP implementations. It is supported by TReK when both the sender and receiver are TReK CFDP implementations (TReK CFDP application, TReK CFDP console application, or TReK CFDP Library).

1. Go to the View menu and select File Transfer Command Line.
2. Set the Default Destination menu if you would like the application to automatically fill in the default destination when you drop a file.
3. Drag and Drop a file or Type a CFDP Command into the CFDP Command field.

The following syntax must be used:

[CFDP Directive] [Transmission] [source-path] [remote-EID] [destination-path]

You may use one of the directives described below.

You may use class1 or class2 for Class of Service.

All paths must be absolute paths.

Example:

```
put class2 "D:\file1.txt" 2 "C:\myfiles\file1.txt"
```

Note: When entering a Source or Destination in a CFDP command line, it must be encapsulated in double quotes.

The TReK CFDP application currently supports multiple CFDP Directives in the NATIVE CFDP mode. This includes get and put, multiple filestore directives, and the message directive. These are defined as follows:

Directive	Description
append_file	append a file at the remote entity to another file at the remote entity.
create_dir	create a directory at the remote entity.
create_file	create an empty file at the remote entity.
delete_file	delete a file at the remote entity.
deny_dir	delete a directory at the remote entity. (like <i>remove_dir</i> , but does not fail if the directory does not exist. Directory must be empty.)
deny_file	delete a file at the remote entity. (like <i>delete_file</i> , but does not fail if the file does not exist.)
get	copy one file from the remote entity to the local entity. (File cannot be empty.)
message	send a text string to the remote entity.
put	copy one file from the local entity to the remote entity. (File cannot be empty.)
remove_dir	delete a directory at the remote entity (directory must be empty).
rename_file	rename a file at the remote entity.
replace_file	replace a file (contents) at the remote entity with another file (contents) at the remote entity.

Some directives only require a Source. The following table describes what is required for Source and Destination for each directive. Name of file, filename, and name of directory refer to an absolute path.

Directive	Source (first file)	Destination (second file)
append_file	name of file whose contents form first part of new file and name of the new file	name of file whose contents will form second part of new file
create_dir	name of directory to be created	
create_file	filename to be created	
delete_file	filename to be deleted	
deny_dir	name of directory to be deleted	
deny_file	filename to be deleted	
get	file or directory name of file(s) to retrieve	file or directory name for file(s) retrieved
message	message	
put	file or directory name of file(s) to send	file or directory name for file(s) sent
remove_dir	Name of directory to be deleted	

rename_file	old filename	new filename
replace_file	filename whose contents are to be replaced	filename whose contents will replace the contents of the first filename

4. Push the Execute button to execute the CFDP command.

The Clear button can be used to clear the CFDP Command field and the Restore button can be used to restore the last command executed.

Note: If you want to transfer the contents of a directory, you can enter the absolute path for a directory in the [source-path] and [destination-path] fields. All the files in the first level of the directory will be transferred. Subdirectories will not be transferred. Be sure to include a forward slash '/' at the end of the directory path.

5.15 How to Use the CFDP Command Line in ION CFDP Mode

This section describes how to use the CFDP Command Line when configured for ION CFDP.

Special Note: ISS Change Request (CR) 13351 Ku-Band Forward Access for Payload Operations only required support for the "Put" directive. Therefore, the Get directive is not supported in all ISS CFDP implementations. It is supported by TReK when both the sender and receiver are TReK CFDP implementations (TReK CFDP application, TReK CFDP console application, or TReK CFDP Library).

1. Go to the View menu and select File Transfer Command Line.
2. Set the Default Destination menu if you would like the application to automatically fill in the default destination when you drop a file.
3. Drag and Drop a file or Type a CFDP Command into the CFDP Command field.

The following syntax must be used:

[CFDP Directive] [Transmission] [source-path] [remote-EID] [destination-path]

ION CFDP Example: put /// "D:\file1.txt" 2 "/home/kirk/file1.txt"

Note: When entering a Source or Destination in a CFDP command line, it must be encapsulated in double quotes.

The TReK CFDP application currently supports multiple CFDP Directives in the ION CFDP mode. This includes get and put, multiple filestore directives, and the message directive. These are defined as follows:

Directive	Description
append_file	append a file at the remote entity to another file at the remote

	entity.
create_dir	create a directory at the remote entity.
create_file	create an empty file at the remote entity.
delete_file	delete a file at the remote entity.
deny_dir	delete a directory at the remote entity. (like <i>remove_dir</i> , but does not fail if the directory does not exist. Directory must be empty.)
deny_file	delete a file at the remote entity. (like <i>delete_file</i> , but does not fail if the file does not exist)
get	copy one file from the remote entity to the local entity. (File cannot be empty.)
message	send a text string to the remote entity.
put	copy one file from the local entity to the remote entity. (File cannot be empty.)
remove_dir	delete a directory at the remote entity (directory must be empty).
rename_file	rename a file at the remote entity.
replace_file	replace a file (contents) at the remote entity with another file (contents) at the remote entity.

Some directives only require a Source. The following table describes what is required for Source and Destination for each directive. Name of file, filename, and name of directory refer to an absolute path.

Directive	Source (first file)	Destination (second file)
append_file	name of file whose contents form first part of new file and name of the new file	name of file whose contents will form second part of new file
create_dir	name of directory to be created	
create_file	filename to be created	
delete_file	filename to be deleted	
deny_dir	name of directory to be deleted	
deny_file	filename to be deleted	
get	file or directory name of file(s) to retrieve	file or directory name for file(s) retrieved
message	message	
put	file or directory name of file(s) to send	file or directory name for file(s) sent
remove_dir	Name of directory to be deleted	
rename_file	old filename	new filename
replace_file	filename whose contents are to be replaced	filename whose contents will replace the contents of the first filename

The Transmission entry for ION CFDP is composed of five properties. Once these properties are configured, a “////” string is used to indicate that the pre-configured values should be used. The “////” nomenclature is shorthand notation for the following combination of values:

Lifespan/Bundle Protocol Class of Service/Expedited Priority Ordinal/Transmission Mode/Criticality

When the values are empty it indicates that pre-configured values should be used for these properties.

The Transmission properties are described below:

Property	Description
Lifespan	The lifespan is the bundle's "time to live" (TTL) in seconds. The bundle is destroyed if its TTL has expired and it has not reached its destination.
Bundle Protocol Class of Service	The Bundle Protocol Class of Service defines the transmission priority of outbound bundles from three ION priority queues corresponding to bulk, standard, and expedited priorities. The expedited priority queue must be empty before bundles in the standard or bulk queues are serviced by ION. Therefore, bundles with expedited priority should only be sent in critical/emergency situations.
Expedited Priority Ordinal	The expedited priority ordinal is only associated with the expedited priority class of service.
Transmission Mode	The transmission mode defines the reliability of bundle delivery to a destination. The three transmission modes supported are best effort, assured, and assured with custody transfer.
Criticality	A critical bundle is one that has to reach its destination as soon as is physically possible. For this reason, bundles flagged as critical may not include custody transfer and require an ION configuration with contact graph routing. In some cases, a critical bundle may be sent over multiple routes to ensure delivery to its final destination. Critical bundles are placed in the expedited priority queue and should only be used in emergency situations.

Example:

```
put /// "D:\file1.txt" 2 "/home/kirk/file1.txt"
```

Note: When entering a Source or Destination in a CFDP command line, it must be encapsulated in double quotes.

4. Push the Execute button to execute the CFDP command.

The Clear button can be used to clear the CFDP Command field and the Restore button can be used to restore the last command executed.

Note: If you want to transfer the contents of a directory, you can enter the absolute path for a directory in the [source-path] and [destination-path] fields. All the files in the first level of the directory will be transferred. Subdirectories will not be transferred. Be sure to include a forward slash '/' at the end of the directory path.

6 Details

This section covers various application details.

6.1 Configuration

The Configure dialog provides the capability to configure for Native CFDP or ION CFDP. When Native CFDP is selected, the Native CFDP tab and Options tab will be displayed. When ION CFDP is selected, the ION CFDP tab and Options tab will be displayed. The Native CFDP tab is used to configure parameters required for Native CFDP. The ION CFDP tab is used to configure parameters required for ION CFDP. The Options tab is used to configure parameters that are optional and apply to both Native CFDP and ION CFDP.

6.1.1 Native CFDP Tab

The Native CFDP tab is shown in Figure 3. Each field is described below.

Configure

Configuration: Native CFDP ION CFDP

Native CFDP Options

Local Entity ID:

Remote Entities

Remote EID	Remote IP Address	Remote Port

CFDP Socket Local IP Address:

CFDP Socket Local Port:

CFDP Socket Queue Size:

Ack Timeout (seconds):

Ack Limit:

Nak Timeout (seconds):

Nak Limit:

Inactivity Timeout (seconds):

Outgoing File Chunk Size (bytes):

Aggregate File Transfer Rate (bits/sec):

Transaction Cycle Time Interval (milliseconds):

Auto Suspend and Resume

Mode:

Port:

Connection Timeout (seconds):

Figure 3 Configure Dialog (Native CFDP Tab)

Local Entity ID

This field should contain your Entity ID.

Remote Entities List

The CFDP application provides the capability to communicate with one or more entities when transferring files. The Remote Entities List identifies the Remote Entity ID, the Remote IP Address, and the Remote Port for each remote entity.

CFDP Socket Local IP Address

A UDP socket is created to send and receive CFDP packets. This is the local IP address used for the UDP socket.

CFDP Socket Local Port

A UDP socket is created to send and receive CFDP packets. This is the local port used for the UDP socket.

CFDP Socket Queue Size

The UDP socket that is created to receive CFDP packets may store CFDP packets in a queue prior to the packets being processed by the CFDP library. This queue minimizes the chances of a CFDP packet being dropped due to packet transmission bursts or a temporary CPU spike on the receiving platform. In general, a larger queue size is needed for higher transmission rates. If an unacceptable number of CFDP packet retransmissions is occurring, increasing the queue size or decreasing the file transfer rate may help decrease or eliminate the CFDP packet retransmissions. Minimum value is 0, maximum value is 1,000,000 and the default value is 1000.

Ack Timeout

The CFDP library sends positive acknowledgment on reception of the end-of-file packet and finished packet. This timeout defines the number of seconds the CFDP library will wait for the ACK packet to arrive prior to retransmitting the end-of-file or finished packet. Minimum value is 1, maximum value is 2,147,483,647 and the default value is 25 seconds.

Ack Limit

The ACK limit is the number of ack timeouts that may occur prior to cancelling the CFDP transaction. Minimum value is 1, maximum value is 2,147,483,647 and the default value is 25.

Nak Timeout

The CFDP library sends a NAK packet identifying the CFDP packets that were not received by the CFDP library. This timeout defines the number of seconds the CFDP library will wait for the retransmission of the requested CFDP packets. Minimum value is 1, maximum value is 2,147,483,647 and the default value is 75 seconds.

Nak Limit

The NAK limit is the number of Nak timeouts that may occur prior to cancelling the CFDP transaction. Minimum value is 1, maximum value is 2147483647 and the default value is 75.

Inactivity Timeout

The inactivity timeout is the length of time, in seconds, the CFDP library is required to wait between CFDP packet receptions prior to cancelling the CFDP transaction. Minimum value is 1, maximum value is 2,147,483,647 and the default value is 300 seconds.

Outgoing File Chunk Size

The outgoing file chunk size is the maximum size, in bytes, of the data zone of the CFDP packets created by the CFDP library. Minimum value is 1, maximum value is 65,200 and the default value is 1300 bytes.

Aggregate File Transfer Rate

The aggregate file transfer rate represents the maximum transmission rate, in bits per second, of the CFDP packets created by the CFDP library. Minimum value is 1, maximum value is 2,147,483,647 and the default value is 10,000,000 bits/second.

Transaction Cycle Time Interval

The transaction cycle time interval, in milliseconds, controls the processing rate of CFDP library transactions. Minimizing the cycle time, increases the transaction speed or processing rate. The default value is 1 millisecond. The minimum value is 0 milliseconds and the maximum value is 2,147,483,647 milliseconds. This value should only be incremented if CPU usage on the host platform is unexpectedly high while idling or while processing a transaction.

Auto Suspend and Resume

The auto suspend and resume checkbox enables the automatic suspension or resumption of all CFDP transactions associated with a remote entity ID when a network connection to that remote entity ID has been lost or found. The TReK CFDP library creates a UPD socket that sends and receives four byte packets to confirm network connectivity. This capability may be used to detect Acquisition Of Signal (AOS) and Loss Of Signal (LOS) events enabling native CFDP to successfully transfer files across multiple AOS/LOS windows without manual intervention. Auto suspend and resume is only supported by the TReK CFDP library. Therefore, the TReK CFDP library software must be running on both the local and remote nodes. The default value is false.

Auto Suspend and Resume Mode

The auto suspend and resume mode identifies the auto suspend and resume relationship between the local node and the remote nodes. The three auto suspend and resume mode parameter values are *Peer to Peer Mode*, *Client or Ground Mode*, and *Server or Flight Mode*. A peer to peer configuration allows all peer to peer nodes to perform CFDP transactions with each other. A client server configuration restricts CFDP transactions. A client may only perform CFDP transactions with a server and a server may only perform CFDP transactions with a client. A client may perform CFDP transactions with multiple server nodes and a server may perform CFDP transactions with multiple client nodes. The four byte connectivity packet is always being transmitted by all nodes in a peer to peer configuration regardless of network connectivity or AOS/LOS periods. In a client/ground and server/flight configuration the connectivity packet is always being

transmitted by the client/ground node but the server/flight node only transmits the connectivity packet over a confirmed network connection during AOS periods. The default value is *Peer to Peer Mode*.

Auto Suspend and Resume Port

The auto suspend and resume port is used to create the UDP socket that sends and receives the four byte connectivity packet. The default port value is 45600 (minimum value 0 and maximum value 65535).

Auto Suspend and Resume Connection Timeout

The auto suspend and resume connection timeout value is the length of time, in seconds, that must pass between the receipt of connectivity packets before a connection between two entity IDs or nodes is declared lost. Connectivity packets are sent once every half second. Minimum value is 1, maximum value is 2,147,483,647 and the default value is 5.

6.1.2 ION CFDP Tab

The ION CFDP tab is shown in Figure 4. Each field is described below.

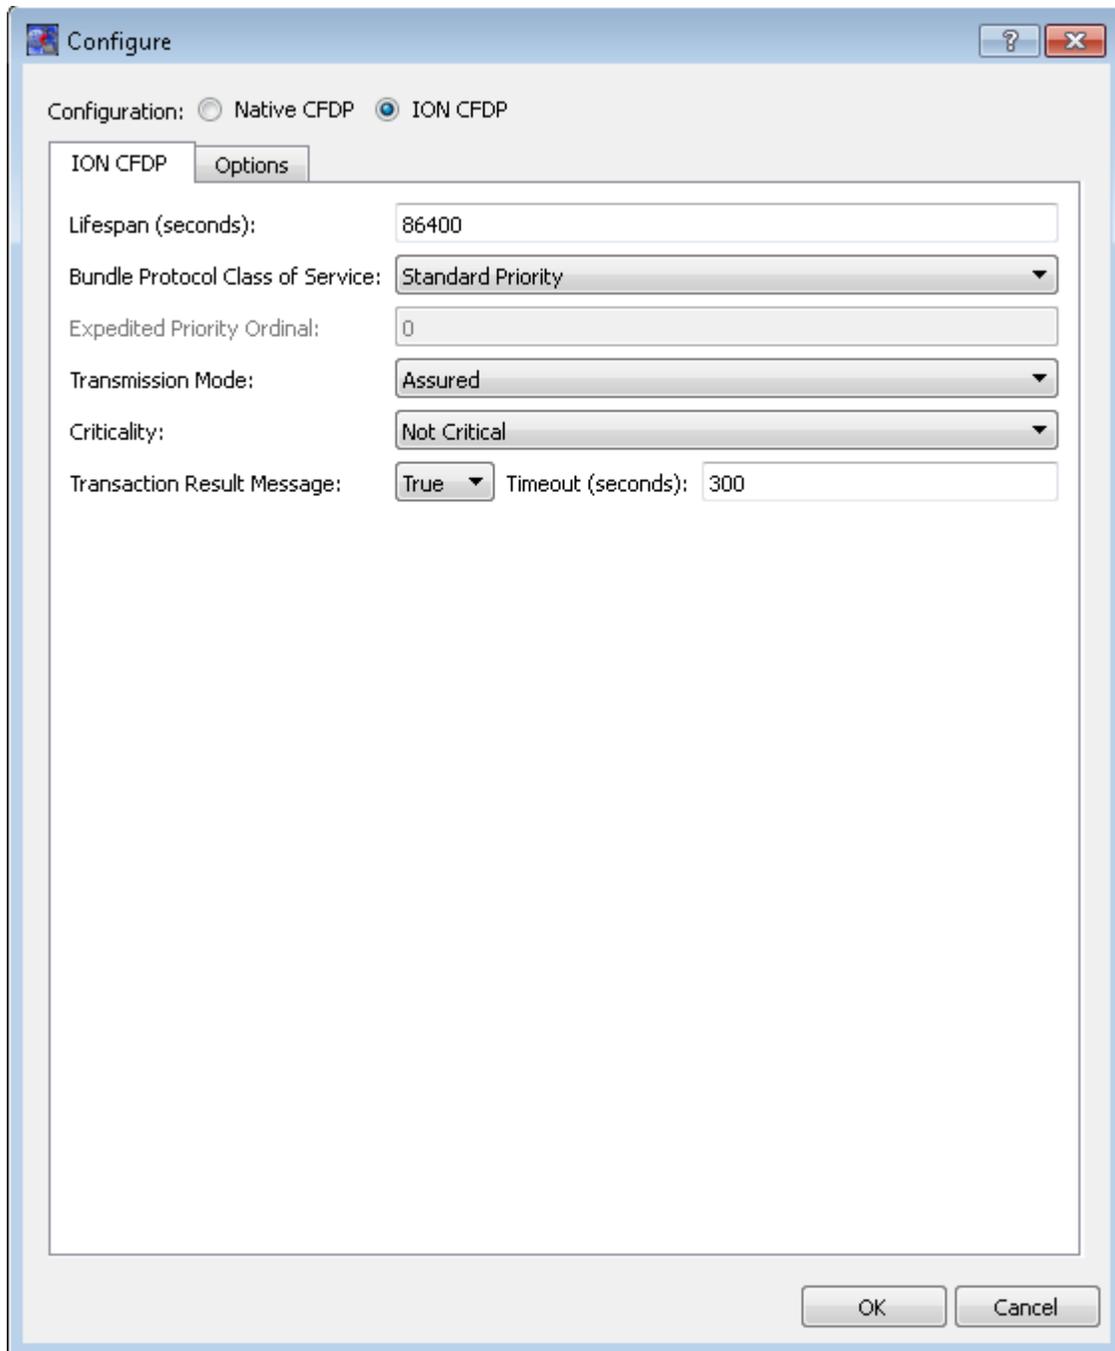


Figure 4 Configure Dialog (ION CFDP Tab)

Lifespan

The lifespan is the bundle's "time to live" (TTL) in seconds. The bundle is destroyed if its TTL has expired and it has not reached its destination. Minimum value is 1, maximum value is 2,147,483,647 and the default value is 86400.

Bundle Protocol Class of Service

The BP class of service defines the transmission priority of outbound bundles from three ION priority queues corresponding to bulk, standard and expedited priorities. The three BP class of service parameter values are *Bulk Priority*, *Standard Priority*, and *Expedited Priority*. The expedited priority queue must be empty before bundles in the standard or bulk queues are serviced by ION. Therefore, bundles with *Expedited Priority* should only be sent in critical/emergency situations. The default value is *Standard Priority*.

Expedited Priority Ordinal

The expedited priority ordinal is only associated with the *Expedited Priority* class of service. Ordinal values range from 0 (lowest priority) to 254 (highest priority). The default value is 0.

Transmission Mode

The transmission mode defines the reliability of bundle delivery to a destination. The three transmission mode parameter values are *Best Effort*, *Assured*, and *Assured with Custody Transfer*. *Best Effort* relies upon the underlying convergence-layer protocol (e.g., Transmission Control Protocol or TCP) to retransmit missing bundles. *Assured* is a step up in reliability and includes BP support in detecting a lost TCP connection and re-forwarding of bundles assumed aborted by the convergence-layer protocol failure. *Assured with Custody Transfer* requires the reception, by the sending node, of a custody acceptance or refusal signal (packaged in a bundle) from the receiving node. The default value is *Assured*.

Criticality

A critical bundle is one that has to reach its destination as soon as is physically possible. For this reason, bundles flagged as critical may not include custody transfer and require an ION configuration with contact graph routing. In some cases, a critical bundle may be sent over multiple routes to ensure delivery to its final destination. Critical bundles are placed in the expedited priority queue and should only be used in emergency situations. The two criticality parameters are *Not Critical* and *Critical*. The default value is *Not Critical*.

Transaction Result Message

The support transaction result boolean enables the generation and transmission of a CFDP transaction result message to the source node. If the source node receives the transaction result message within a designated time window, it will update its transaction status with the transaction result (e.g., success or fail). If the support transaction result boolean is set to "true" and the result message is not received within a designated time window, the source node's transaction status is set to "unknown". If this boolean is set to "false" and the source node did not experience any problems while transmitting the CFDP transaction request, the final transaction status is set to "finished". This capability is only supported by the TReK CFDP library. Therefore, the TReK CFDP library software must be running on both the source and destination nodes. The default value is true.

Transaction Result Message Timeout

The transaction result message timeout is the length of time, in seconds, the TReK CFDP library will wait for a transaction result message prior to setting the final status of the transaction to "unknown". Minimum value is 1, maximum value is 2,147,483,647 and the default value is 300.

6.1.3 Options Tab

The Options tab is shown in Figure 5. The Options tab items are applicable regardless of whether Native CFDP or ION CFDP is selected. Each field is described below.

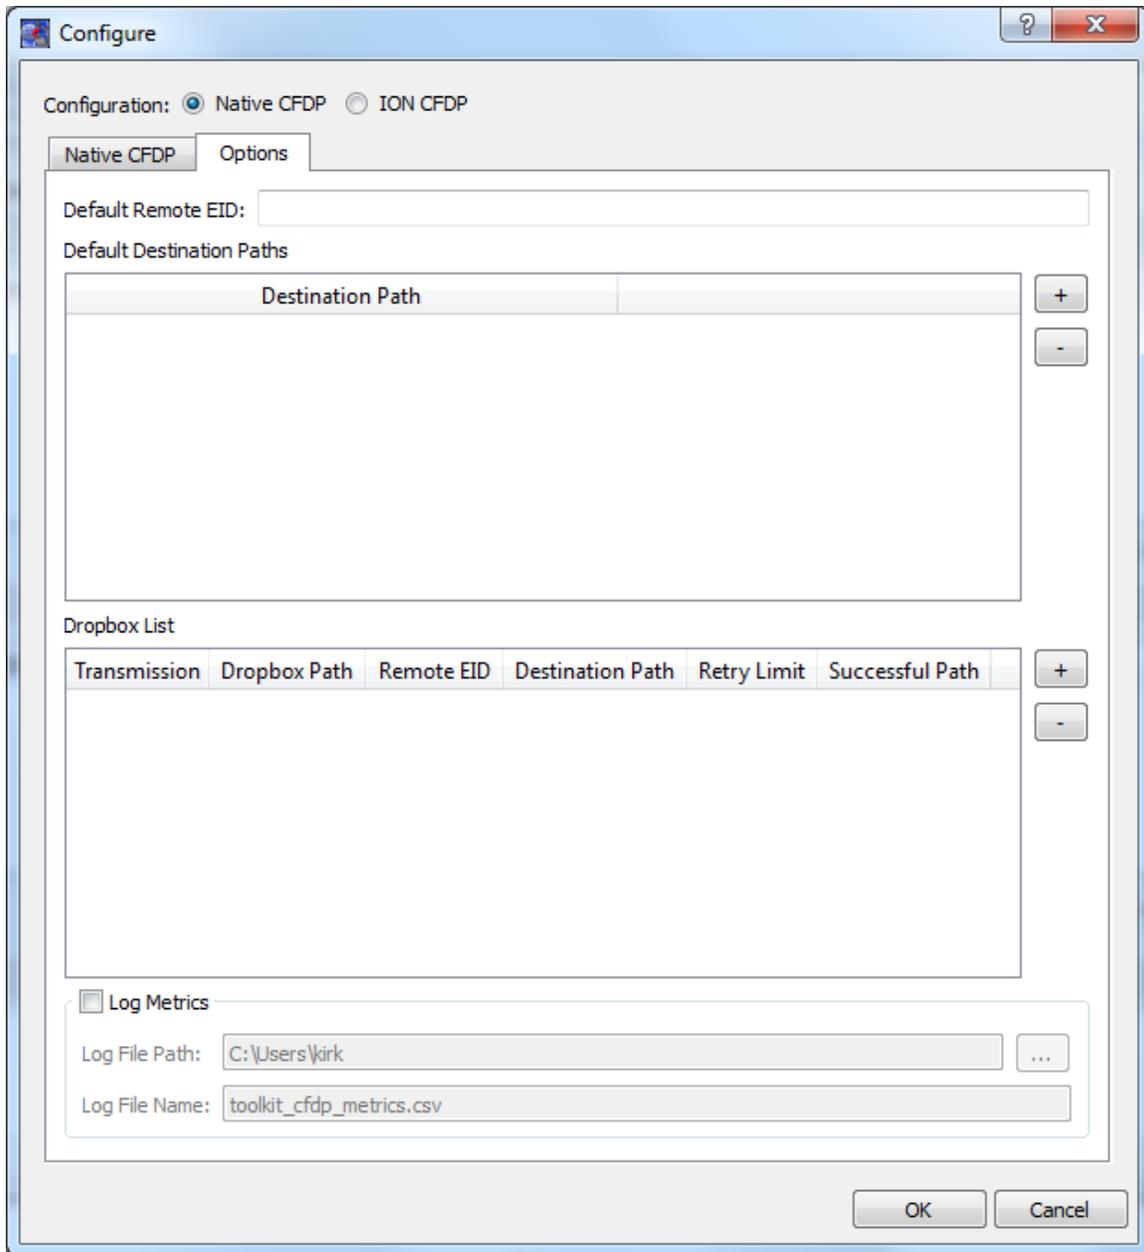


Figure 5 Configure Dialog (Options Tab)

Default Remote EID

The Default Remote EID is used during Drag and Drop. If this field contains a value, this value will be entered as the Remote EID when you drag and drop a file into the “CFDP Commands” list or the “CFDP Command” field.

Default Destination Paths

The Default Destination is used during Drag and Drop. All destinations listed in the Default Destination Paths list will appear in the “Default Destination” menu on the CFDP main window. When you drag and drop a file into the “CFDP Commands” list or the

“CFDP Command” field, the destination selected from the Default Destination menu will automatically be entered into the Destination field.

Dropbox List

The Dropbox List is used to define one or more dropboxes to push files to a remote destination. The dropboxes are available in both Native and ION CFDP modes. Dropbox configuration parameters include where the dropbox is located and the destination of each file placed in the dropbox. When the CFDP service is active, a dropbox file is transferred to the dropbox destination immediately after the file is copied to the dropbox. If files exist in the dropbox prior to CFDP service activation, the pre-existing dropbox files are immediately transferred when the CFDP service is activated.

For each dropbox you can define the Transmission, the Dropbox path, the Remote entity ID, the Destination Path, the Retry Limit, and the Successful Transaction Path. The Retry Limit defines the number of additional attempts at transferring a file before declaring the transaction unsuccessful. The Successful Transaction Path is the path to the directory where successfully transferred files are stored upon completion of a transaction. If the Successful Transaction Path is empty, the drop box will delete the file if the file is successfully transferred to its destination. For Native CFDP class 1 service, files are simply moved or deleted from the dropbox directory when the transaction has completed the number of retry attempts. The dropbox for ION CFDP is identical to Native CFDP except "class1" or "class2" is replaced by "////" indicating the ION CFDP parameter values defined on the ION CFDP configuration tab will be used. Another important distinction between an ION and Native CFDP dropbox is associated with the Retry Limit. An ION CFDP dropbox ignores the Retry Limit value and resets the value to zero in the TReK CFDP library. There are two important reasons why the ION CFDP dropbox does not attempt to retransmit failed CFDP transactions:

1. ION CFDP uses the original filename when populating the destination file. Any attempt to retransmit a file must also include a "delete" filestore directive to ensure no file with the original filename exists at the destination.
2. If transaction result messages are being processed and an incorrect "transaction_result_message_timeout" is chosen, a successfully transferred file will be incorrectly deleted.

If transaction result messages are not being processed by the TReK ION CFDP library (i.e., class 1 service), files are simply moved or deleted from the dropbox directory when the transaction has completed the transfer from the dropbox.

Dropbox files are renamed with a ".dropbox" extension while they are being processed by the dropbox. If a dropbox fails to successfully transfer a file to the destination directory, a class 2 native CFDP dropbox will initiate additional transfer attempts up to the "Retry Limit" designated by the dropbox configuration. A class 1 Native CFDP dropbox will blindly repeat the file transfer up to the "Retry Limit". If the final status message of a file transaction identifies an unsuccessful file transfer, the file is renamed with an ".unsuccessful" extension. If the CFDP library fails to receive the final status of a file

transaction, the file is renamed with an ".unknown" extension. If an error occurred during the file transfer, the file is renamed with a ".droperror" extension. Only successfully transferred files are moved or deleted from the dropbox directory.

Log Metrics

The CFDP application provides the capability to write metrics to a file. If you check Log Metrics, metrics will be written to the log file specified. Metrics Logging will start when CFDP is activated and stop if you uncheck the box or CFDP is deactivated. See Section 6.4 for details on what metrics are logged.

Log File Path

The Log File Path should contain the absolute path to the directory where the log file should be written.

Log File Name

The Log File Name field should contain the name to use for the log file.

6.2 Transactions

This section describes the columns in the main window Transactions area.

Transaction ID

The transaction ID. A unique ID used to identify a transaction.

Action

The action (put, get, etc.) executed by the transaction.

Remote EID

The Entity ID of the other party involved in the transfer.

Status

The status of the transaction: Sending, Receiving, Finished, Success, Fail, Unknown, etc. The Status field updates as the transaction progresses. The final status of a transaction using ION CFDP is "Finished" if the TReK CFDP application is not configured to receive a final transaction message from the remote site. If the TReK CFDP application is configured to receive a final transaction message, and the message does not arrive in the user defined timeout period, the final status is "Unknown".

% Complete

The % complete of the file transfer. The % Complete field updates as the transaction progresses. This field is not relevant for ION CFDP filestore directives and message directives.

Bytes Transferred

The number of bytes transferred. The Bytes Transferred field updates as the transaction progresses. This field is not relevant for ION CFDP filestore directives and message directives.

Source

The source identified in the CFDP command.

Destination

The destination identified in the CFDP command. This field is not relevant for ION CFDP message directives and some filestore directives.

Configuration

The configuration field indicates the direction of the file transfer: “Sending” or “Receiving”.

File Size

The File Size field displays the size of the file being transferred in bytes. This field is not relevant for ION CFDP filestore directives and message directives.

6.2.1 Configure Transactions Columns Dialog

The Configure Transactions Columns dialog provides the capability to configure the columns shown in the Transactions area. The Columns Showing list identifies the columns that will be displayed. The arrow buttons provide the capability to move items between the Available Columns list and the Columns Showing list. To hide a column, move it from the Columns Showing list to the Available Columns list. The Move Up and Move Down buttons provide the capability to specify the order of the columns showing. The item listed at the top of the list will appear in the left most location in the Transactions area. The configuration of the Transactions area (columns showing/column order) is not saved.

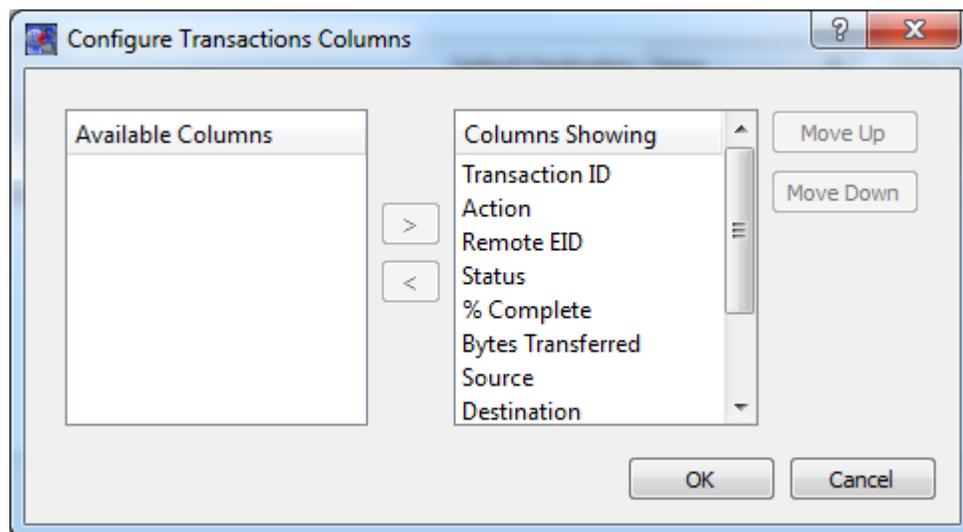


Figure 6 Configure Transactions Columns Dialog

6.3 Statistics

This section describes the statistics that can be logged by the application to a user specified file. Statistics include device statistics and packet statistics. The snapshot of device and packet statistics is updated once a second with current statistics information at both the device and packet level. Device statistics provides information on all packets that are being received or sent by the device. Packet statistics provides information on the individual packet groups that are being received or sent by the device. The TReK CFDP library that performs this work for the application does not divide packets into groups so packet statistics mirror device statistics. When configured for ION CFDP, the TReK CFDP library relies upon the bundle protocol to assure delivery of file segments. So in ION CFDP mode, device and packet statistics are not relevant.

Device Statistics

Device Key

A character string that uniquely identifies each device.

IP Address

The IP address of the device if it is a socket.

Port (C/L/S)

The port number of the device if it is a socket. If the socket is a client socket then the port number will be followed by two '/'. If the client socket is connected to a listener socket, the listener's port number is also listed. If the socket is a server socket then the client port number that is connected to the server is listed first, followed by two '/' and the server's listener port number. If the socket is a listener socket the listener's port number is listed between two '/'.

Protocol

The IP transportation protocol, either TCP or UDP, if the device is a socket.

Segments Rcvd

The number of segments received by the device if the device is a TCP socket.

Pkts Rcvd

The total number of packets received by the device.

Pkts Sent

The total number of packets sent by the device.

Pkt Rcv Rate

The number of packets received by the device in the last second.

Max Pkt Rcv Rate

The maximum packet receive rate experienced by the device.

Kbit Rcv Rate

The number of kilobits received by the device in the last second.

Max Kbit Rcv Rate

The maximum kilobit receive rate experienced by the device.

Pkt Send Rate

The number of packets sent by the device in the last second.

Max Pkt Send Rate

The maximum packet send rate experienced by the device.

Kbit Send Rate

The number of kilobits sent by the device in the last second.

Max Kbit Send Rate

The maximum kilobit send rate experienced by the device.

Pkts Dropped

The total number of packets that were dropped because they could not be temporarily stored in a queue or buffer. The most likely cause of dropped packets is packets arriving at very high packet rates and/or a queue size that is too small.

Packet StatisticsPacket Key

A character string that uniquely identifies each packet type.

Pkts Rcvd

The total number of packets that are received and identified as this packet type.

Pkts Sent

The total number of packets that are sent and identified as this packet type.

Pkt Rcv Rate

The number of packets received and identified as this packet type in the last second.

Max Pkt Rcv Rate

The maximum packet receive rate experienced by this packet type.

Kbit Rcv Rate

The number of kilobits received and identified as this packet type in the last second.

Max Kbit Rcv Rate

The maximum kilobit receive rate experienced by this packet type.

Pkt Send Rate

The number of packets of this packet type sent in the last second.

Max Pkt Send Rate

The maximum packet send rate experienced by this packet type.

Kbit Send Rate

The number of kilobits of this packet type sent in the last second.

Max Kbit Send Rate

The maximum kilobit send rate experienced by this packet type.

Pkts Dropped

The total number of packets, of this type, that were dropped because they could not be processed by another device. The most likely cause of dropped packets is packets arriving at very high packet rates.

Pkt Seq Errors

The total number of packet sequence errors identified for this packet type. For example, the primary header of the CCSDS packet contains a 14-bit number that is used as a sequence count. For each packet that arrives, the sequence count is compared to the sequence count of the previous packet. If the count is not the next in the sequence, the packet sequence error value is incremented.

Max Pkt Seq Error

The maximum packet sequence error experienced by this packet type.

6.4 Metrics

This section describes the CFDP metrics that can be logged by the application. The snapshot of CFDP metrics is updated once a second with the completion status of each CFDP transaction. The CFDP metrics are divided into sending and receiving categories and grouped by file size ranging from less than a one megabyte to over a gigabyte. The metrics include calculations on the number and percent of files sent or received, the minimum, maximum, and average file transfer time, and the number and percent of files that required packet retransmission.

The following Metrics are provided for Sending and Receiving.

File Size (MB)

The minimum and maximum file size, in megabytes, for the group.

Success Count

The number of successful file transfers for the group.

Success %

The percentage of successful file transfers for the group.

Cancel Count

The number of canceled file transfers for the group.

Abandon Count

The number of abandoned file transfers for the group.

Fail Count

The number of failed file transfers for the group.

Unknown Count

The number of unknown file transfers for the group.

Min Trans Time (sec)

The minimum successful file transfer time in seconds.

Max Trans Time (sec)

The maximum successful file transfer time in seconds.

Avg Trans Time (sec)

The average successful file transfer time in seconds.

Success W/NAK Cnt

The number of successful file transfers that required one or more NAK packets.

Success W/ NAK %

The percentage of successful file transfers that required one or more NAK packets.

Min NAK Cnt/Trans

The minimum number of NAK packets that had to be transferred for a successful file transfer requiring NAK packets.

Max NAK Cnt/Trans

The maximum number of NAK packets that had to be transferred for a successful file transfer requiring NAK packets.

Avg NAK Cnt/Trans

The average number of NAK packets that had to be transferred for a successful file transfer requiring NAK packets.

6.5 Configure Message Logging

This section describes how to configure message logging. The Configure Message Logging dialog is shown in Figure 7. This dialog can be displayed using the Options menu Configure Message Logging menu item.

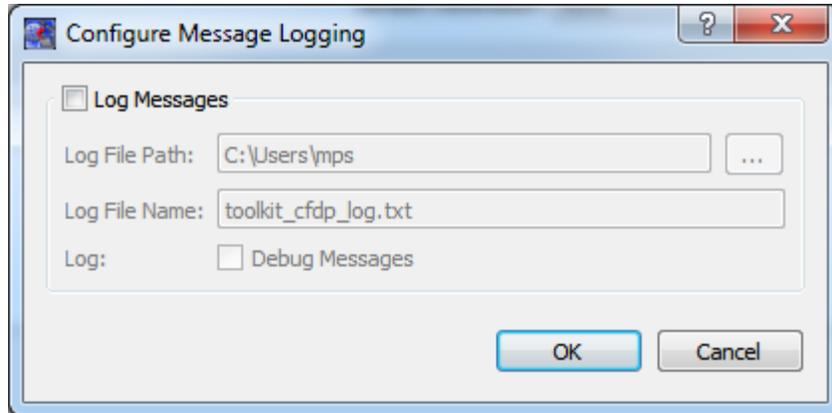


Figure 7 Configure Message Logging Dialog

Each field is described below.

Log Messages

The CFDP application provides the capability to write application messages to a file. If you check Log Messages, application messages will be written to the log file specified. Logging will start once it is turned on, so any messages generated before logging was turned on will not appear in the file.

Log File Path

The Log File Path should contain the absolute path to the directory where the log file should be written.

Log File Name

The Log File Name field should contain the name to use for the log file.

Log Debug Messages

The Log Debug Messages checkbox specifies whether debug messages should be written to the log. For example, if Debug is checked, Debug messages will be written to the log.

6.6 Configure Statistics Logging

This section describes how to configure statistics logging. The Configure Statistics Logging dialog is shown in Figure 8. This dialog can be displayed using the Options menu Configure Statistics Logging menu item. Statistics are generated and captured in memory as you use the application. Statistics can also be logged to a file by turning on Statistics Logging. When Statistics Logging is on, the Statistics Log file provides a

snapshot of the application statistics from the time the application started or the last statistics reset. See Section 6.3 for details about the statistics that are logged.

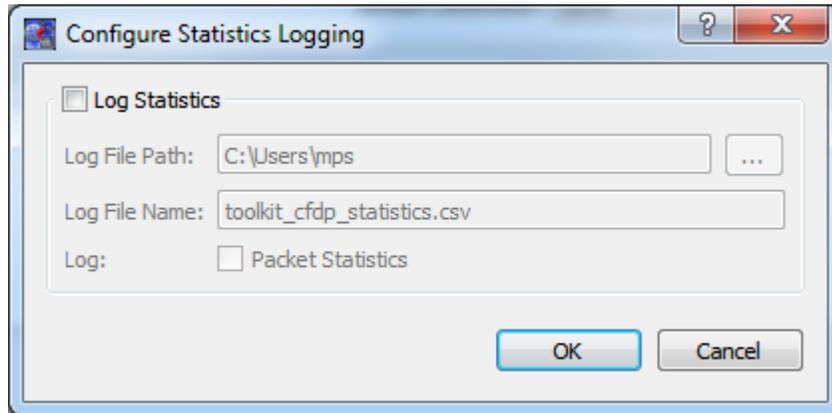


Figure 8 Configure Statistics Logging Dialog

Each field is described below.

Log Statistics

The CFDP application provides the capability to write application statistics to a file. If you check Log Statistics, application statistics will be written to the log file specified.

Log File Path

The Log File Path should contain the absolute path to the directory where the log file should be written.

Log File Name

The Log File Name field should contain the name to use for the log file.

Log Packet Statistics

The Log Packet Statistics checkbox specifies whether packet statistics should be written to the log. For example, if Packet is checked, packet statistics will be written to the log.

6.7 Application Messages

Various types of application messages are generated including information, progress, warning, error, and debug messages. Information, warning, and error messages will be displayed in the main window message area. All application messages are sent to the Messages dialog shown in Figure 9. The Messages dialog can be configured to display specific types of messages. By default, the Messages dialog will display information, progress, warning, and error messages. Columns in the Messages dialog can be sorted by clicking on the column header. The Messages dialog is available from the Options menu.

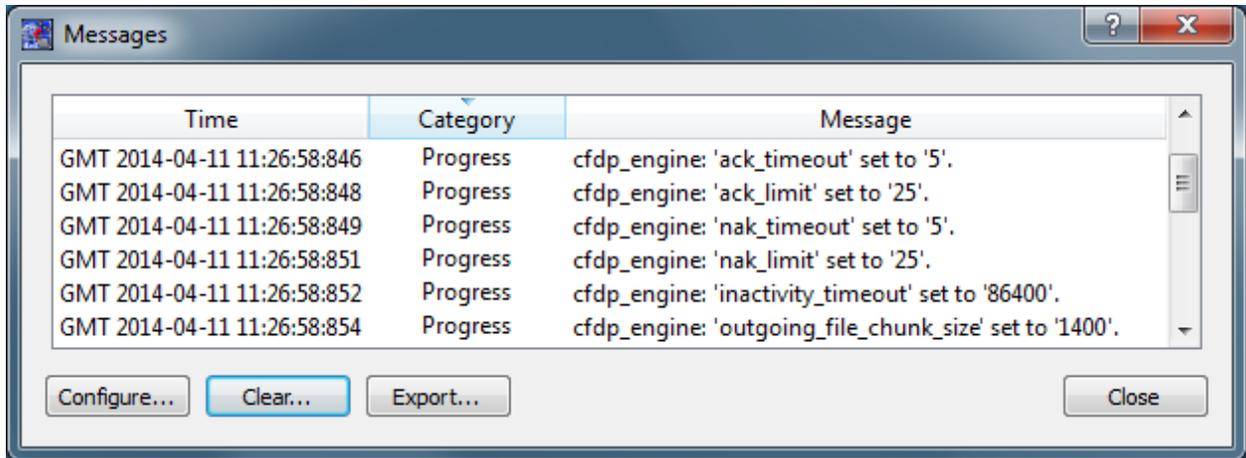


Figure 9 Messages Dialog

Configure

The Configure button provides access to the Configure Messages dialog shown in Figure 10. This dialog is used to filter the types of messages (category) displayed in the Messages dialog.

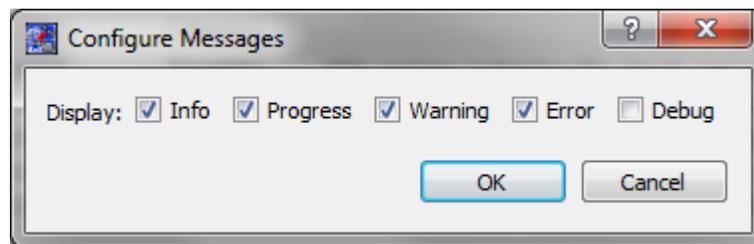


Figure 10 Configure Messages Dialog

Clear

The Clear button provides access to the Clear Messages dialog shown in Figure 11. This dialog provides two ways to clear messages in the Messages dialog. You can clear all the messages or clear selected messages. Once you clear messages, the messages are permanently deleted.

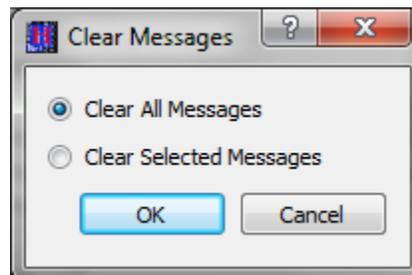


Figure 11 Clear Messages Dialog

Export

The Export button provides the capability to save all the application messages to a file. When you push the Export button you will be prompted for a directory and filename. Export will save all messages, not just the messages currently displayed in the Messages dialog (i.e. the 'Configure' filter is not applied). The name you provide for the file will be modified with a time tag prefixed to the filename. The time tag indicates the time the file was closed. For example:

Filename Input: messages.txt
 Filename Output: GMT_2014-04-10_16~57~27~182_messages.txt.

6.8 Application Configuration File

The CFDP application saves the following information when you save a configuration:

- Configuration information in the Configure Dialog.
- CFDP Commands list displayed in the Main Window CFDP Commands area.
- CFDP Command displayed in the Main Window File Transfer Command Line.
- Default Destination menu selection in the CFDP Commands area.
- Default Destination menu selection in the File Transfer Command Line area.
- Log Messages Configuration
- Log Statistics Configuration
- Configure Messages Checkbox Selections

The configuration of the Transactions area (columns showing/column order) is not saved.

6.9 Application Settings

The CFDP application saves some settings as application settings each time you exit the application. The next time you run the application, the application will initialize with the previous application settings. The following application settings are saved:

- Application Window Size
- Application Window Position

7 FAQ and Troubleshooting

This section addresses Frequently Asked Questions and provides tips for troubleshooting common gotchas.

7.1 Is There an Easy Way to Transfer the Contents of a Directory?

Yes. To transfer the contents of a directory, enter the absolute path to the directory. The CFDP application will transfer all the files in the first level of the directory.

Subdirectories will not be transferred. Be sure to include a forward slash '/' at the end of the directory path when entering the absolute path into the Source and Destination fields.

7.2 What is class1 and class2?

Class1 and class2 are transmission properties used with Native CFDP. Note: Special thanks to NASA/GSFC for the following user friendly definitions:

“CFDP provides three **Service Classes**. **Service Class 1** simply sends each file; there are no replies from the receiver, nor is there any guarantee of reliable delivery. **Service Class 2** ensures reliable file delivery; any required retransmissions are requested and performed by CFDP. **Service Class 3** provides **Proxy Operations** (e.g. Entity 'A' tells Entity 'B' to make a request of Entity 'C').”

The TReK CFDP application supports Class 1 and Class 2 when configured for Native CFDP. When typing in one of these choices please use **class1** and **class2**.

7.3 What is “////”?

“////” is a value used to designate the default set of transmission properties defined in the Configure dialog for ION CFDP. “/” can also be used. When configured for ION CFDP, transmission properties are specified using the Configure dialog and will apply to all CFDP transactions. For more information about transmission properties please reference section 6.1.2.

7.4 Source and Destination Constraints

Source and Destinations must be identified using an absolute path. The absolute path name consists of the full path and the file name. The absolute path must meet the following criteria:

- The absolute path cannot exceed 256 characters (null terminated).
- The size of the file to be transferred must be greater than 0 Bytes.
- The size of the file to be transferred cannot exceed 4.2 Giga Bytes for Native CFDP.
- The size of the file to be transferred cannot exceed 2.1 Giga Bytes for ION CFDP.

7.5 I Dropped My File into the List and it Turned Red

Red indicates the file or directory contains an illegal character. File and directory names must meet the File and Directory Name Constraints described in section 7.4.

7.6 My File Starts to Transfer and Then Stops

Chances are the remote entity is unavailable or is not configured as you expected. Check both the Local and Remote entity configurations and ensure the EIDs are correct, the IP address and port information is correct, and both entities are up and running.

7.7 Transfer Results When Item Exists At Destination

Transfer results when an item exists at a destination differ based on configuration.

When configured for Native CFDP

If you attempt to “put” an item to a destination on a Windows computer, and the item already exists at the destination, you will see a “cancelled (Filestore rejection)” error message and the item will not be overwritten. If you attempt to “put” an item to a destination on a Linux computer, and the item already exists at the destination, the item will be overwritten.

When configured for ION CFDP

If you attempt to “put” an item to a destination on a Windows computer, and the item already exists at the destination, the “put” transaction status will show “Fail”. If you attempt to “put” an item to a destination on a Linux computer, and the item already exists at the destination, the “put” transaction status will show “Fail”.

7.8 Important Things To Know When Using The Get Primitive

The TReK CFDP software provides the capability to "get" or retrieve one or more files from a remote destination. It is important to note that the CFDP Blue Book describes implementation of a "get" as a proxy "put". TReK Native CFDP implements the CFDP Blue Book defined proxy "put" function using proxy request and response messages. TReK ION CFDP does not implement proxy "put" function using proxy request and response messages. In addition, the “get” directive is not supported in all ISS CFDP Native and ION implementations. Therefore, the "get" request will only succeed if both sides of the file delivery transaction are using TReK software. The TReK ION CFDP “get” function initiates the file transfer process by delivering an equivalent "put" primitive character string to the remote platform's CFDP software using a “get” request message. In addition, a “get” response message is generated providing transaction status information to the initiator. There is an error scenario in which the initiator of the ION CFDP “get” receives no feedback. If an ION CFDP “get” request message or “get” response message never reaches its target platform, the initiator will receive no status describing the result of the “get” request.

7.9 How Does Pause Transactions Work?

When configured for Native CFDP

CFDP pauses transactions by pausing both data transmission and timeout clocks associated with the local platform’s file transfer transactions. The remote platform is not notified of the pause of file transfer transactions on the local platform and may exceed its timeout limits if the local platform does not resume its file transfer transactions for an extended period of time. If the local file transfer pause is for an extended period of time, the remote platforms should receive a separate pause transaction command to avoid exceeding its timeout limits. Both platforms may resume file transfer transactions when they receive separate resume file transfer transaction commands.

When configured for ION CFDP

The ION CFDP application completes its file transfer responsibilities when it hands off to ION's BP application. The handoff may be relatively quick depending on the size of file. The pause transaction request will not pause/suspend a files transfer after the ION CFDP application hands off a transaction to ION's BP application. The pause transaction request does not affect ION CFDP file reception. The lifespan of the packet bundles must also be considered when pausing for an extended period of time.

7.10 CFDP Transactions in an AOS/LOS Environment

Maintaining CFDP transactions across extended LOS periods is problematic. ION CFDP solves this issue by relying on DTN's store and forward infrastructure. A contact plan that predicts AOS/LOS periods may be used to support ION CFDP transactions between a flight node and a ground node if the two nodes are communicating directly with each other. If the ION CFDP transaction communication path includes the Huntsville Operations Support Center DTN2 node, the DTN2 node will store and forward the ION CFDP transaction during AOS/LOS periods. Native CFDP is not supported by an underlying store and forward DTN infrastructure. A user must configure timeouts or manually suspend and resume CFDP at both ends of a transaction to maintain the transaction across an LOS period. The TReK CFDP library solves this native CFDP issue by providing an automatic suspend and resume capability during LOS and AOS periods. When the TReK CFDP library senses an LOS event, it automatically suspends all CFDP transactions. When the TReK CFDP library senses an AOS event, it automatically resumes all CFDP transactions. TReK identifies AOS and LOS events by sending and receiving a four byte connectivity packet over a predefined UDP socket. TReK's automatic suspend and resume design maintains native CFDP transactions across multiple LOS periods without adjusting timeout values or requiring user intervention. If new CFDP transactions are requested during an LOS period, the pending transaction requests are placed in a queue and are submitted to the TReK CFDP library at the beginning of the next AOS period. The automatic suspend and resume parameters in the TReK CFDP configuration file configure and control TReK's automatic suspend and resume feature. For more information about automatic suspend and resume parameters please reference section 6.1.1.