

Telescience Resource Kit (TReK)



POIWG Splinter

January 29, 2015



Agenda

- General Information
- HOSC Payload Ethernet Gateway (HPEG)
- CCSDS File Delivery Protocol (CFDP)
- Delay Tolerant Networking (DTN)



Background

- TReK is one of the Huntsville Operations Support Center (HOSC) remote operations solutions. It can be used to monitor and control International Space Station payloads from anywhere in the world. It is comprised of a suite of software applications and libraries that provide generic data system capabilities and access to HOSC services.
- The TReK Software has been operational since 2000. A new cross-platform version of TReK is under development. The new software is being released in phases during the 2014-2016 timeframe.
 - The TReK Release 3.x series of software is the original TReK software that has been operational since 2000. This software runs on Windows. It contains capabilities to support traditional telemetry and commanding using CCSDS packets.
 - The TReK Release 4.x series of software is the new cross platform software. It runs on Windows and Linux. The new TReK software will support communication using standard IP protocols and traditional telemetry and commanding.
 - All the software listed above is compatible and can be installed and run together on Windows.
- The new TReK software contains a suite of software that can be used by payload developers on the ground and onboard (TReK Toolkit).
 - TReK Toolkit is a suite of lightweight libraries and utility applications for use onboard and on the ground.
 - TReK Desktop is the full suite of TReK software – most useful on the ground.
 - When TReK Desktop is released, the TReK installation program will provide the option to choose just the TReK Toolkit portion of the software or the full TReK Desktop suite.
- The ISS program is providing the TReK Toolkit software as a generic flight software capability offered as a standard service to payloads.
- TReK Software Verification will be conducted during the April/May 2015 timeframe. Payload teams using the TReK software onboard can reference the TReK software verification.




Background

- TReK will be demonstrated on-orbit running on an ISS provided T61p laptop. Target Timeframe: September 2015 – 2016.
- The on-orbit demonstration will collect benchmark metrics, and will be used in the future to provide live demonstrations during ISS Payload Conferences.
- Benchmark metrics and demonstrations will address the protocols described in SSP 52050-0047 Ku Forward section 3.3.7.



TReK Capabilities Overview

ISS

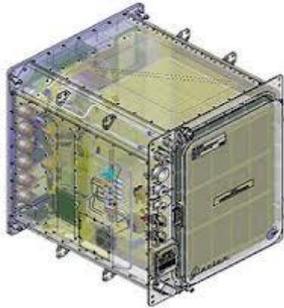

TReK Capabilities On-Board

- Send/Receive data using standard IP protocols (Unicast, Multicast, TCP Listener, TCP Server, TCP Client).
- Create, populate, build, and decompose custom packets. Includes support for pre-defined and custom headers.
- Record data.
- Transfer files (send and receive) using CFDP.
- Configure and Manage (start, stop, monitor) ION DTN node.
- Support for the following EXPRESS messages (via Ethernet): Payload Health and Status, PEP Bundle Request, PEP Procedure Execution Request, Rack Time Request, Ancillary Data Config Control, Payload Telemetry Downlink Data.



Payload Ground Site



TReK Capabilities Ground

- Send/Receive data using standard IP protocols (Unicast, Multicast, TCP Listener, TCP Server, TCP Client).
- Create, populate, build, and decompose custom packets. Includes support for pre-defined and custom headers.
- Record and playback data.
- Transfer files (send and receive) using CFDP.
- Configure and Manage (start, stop, monitor) ION DTN node.
- Use HPEG application to log into POIC and start/stop HOSC Payload Ethernet Gateway (HPEG) session with payload. (HPEG session provides support for SSH, HTTPS, RDP, CFDP, etc.).
- Other capabilities provided via TReK Desktop (data display, data statistics, traditional telemetry & commanding (CCSDS), etc.)

Note: All capabilities are available on Windows and Linux.



TReK Operational Software Releases through CY2015

Capability	Release	Date	Description	Contents
Ku-Forward Capabilities	4.0.0	10-2-2014	This release contains capabilities to access International Space Station payloads using standard network protocols and services. It is suitable for use on the ground and onboard ISS.	<ul style="list-style-type: none">• CFDP Application• CFDP Console Application• CFDP Library• Device Services Library• Data Library• HPEG Application• TReK Help Application (Integrated Help)
DTN Capabilities	4.1.0	6-5-2015	This release provides support for Delay Tolerant Networking. It is suitable for use on the ground and onboard ISS.	Adds DTN Capabilities. This release includes all the capabilities from the previous release (4.0.0) with additions and updates for DTN. <ul style="list-style-type: none">• All Previous Release Content (4.0.0):• IONconfig Application• IONizer Application• IONizer Library
EXPRESS Capabilities	4.2.0	9-2-2015	This release provides support for the EXPRESS Payload to ISS C&DH System Ethernet interface.	Adds EXPRESS Capabilities. This release includes all the capabilities from the previous release (4.1.0). <ul style="list-style-type: none">• All Previous Release Content (4.1.0):• Support for EXPRESS interface.

TReK 0.3.0, the first beta release with TReK DTN Capabilities, will be available on February 2, 2015.

TReK Schedule information is posted on the TReK Web Site here: http://trek.msfc.nasa.gov/trek_schedule.htm.



TReK 4.1.0 (TReK Toolkit) Content

Software	Description
CFDP Application	Provides capabilities to perform file transfer functions using the CCSDS File Delivery Protocol (CFDP) . This application has a graphical user interface. You can choose to use Native CFDP (CFDP using UDP) or ION CFDP (CFDP over BP).
CFDP Console Application	Provides capabilities to perform file transfer functions using the CCSDS File Delivery Protocol (CFDP). This application is a console application targeted for use onboard ISS. It was provided to serve two purposes: (1) a CFDP console application for customers to use right out of the box, and (2) an example program showing customers how to use the CFDP Library to perform common CFDP functions. You can choose to use Native CFDP (CFDP using UDP) or ION CFDP (CFDP over BP).
CFDP Library	Provides an application programming interface to perform file transfer functions using the CCSDS File Delivery Protocol (CFDP). You can choose to use Native CFDP (CFDP using UDP) or ION CFDP (CFDP over BP).
Data Library	Provides an application programming interface to create, populate, build, and decompose packets. Includes support for pre-defined and custom headers and packets.
Device Services Library	Provides an application programming interface to perform functions such as creating sockets, sending data, receiving data, etc. Includes support for Bundle Protocol.
HPEG Application	Provides access to HOSC Payload Ethernet Gateway (HPEG) services. This application has a graphical user interface. It provides the capability to log into the HOSC and request HPEG services. This includes selecting a ground node ID (if applicable), starting and stopping services, and enabling and disabling the HPEG Idle Check. Includes support for DTN.




TReK 4.1.0 (TReK Toolkit) Content Continued

Software	Description
IONconfig Application	Provides the capability to generate ION configuration files and scripts. The scripts (Windows batch files and Linux shell scripts) can be used to start and stop ION. This application has a graphical user interface.
IONizer Application	Provides capabilities to start, stop, and monitor ION. This application has a graphical user interface.
IONizer Library	Provides an application programming interface to start, stop, and monitor ION.
TReK Help Application	Provides integrated help for all TReK applications and libraries.

This is the second release of the TReK Toolkit. There will be additional releases that add more capabilities.




Configuring to use HPEG

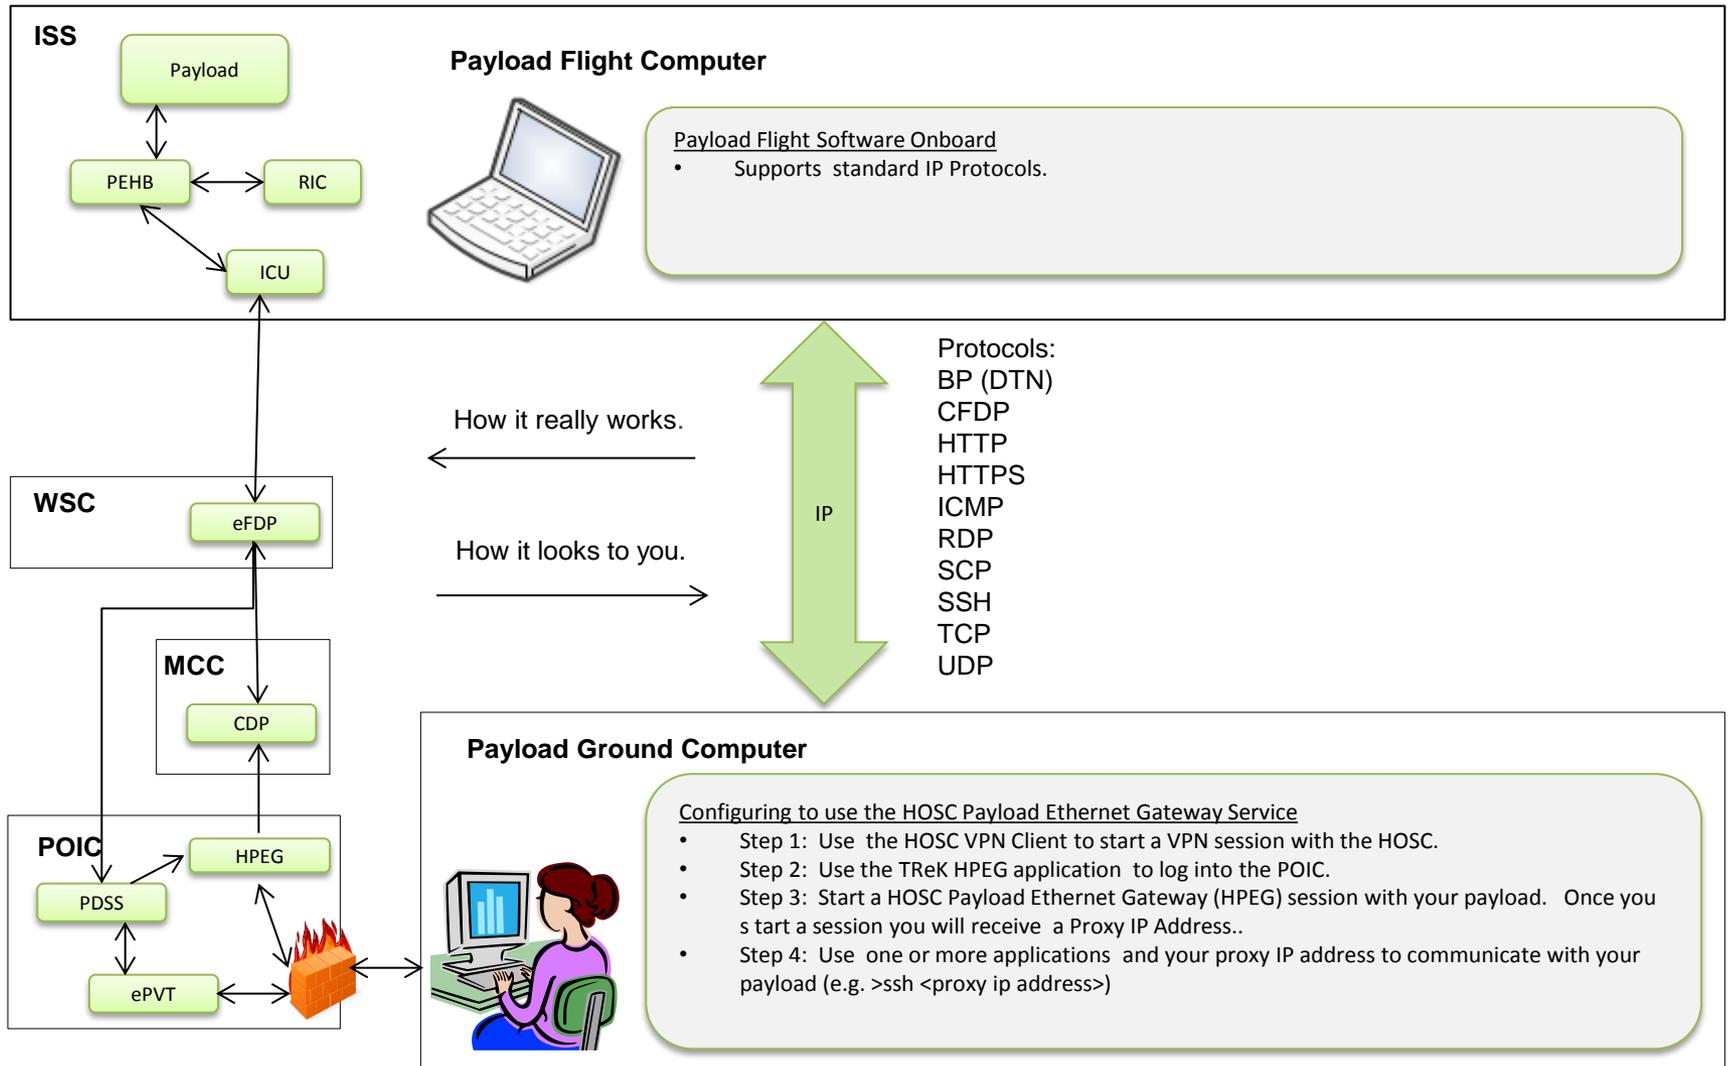



TReK HPEG Main Window


- This is the TReK HPEG application main window. This application is used to access the POIC's HOSC Payload Ethernet Gateway (HPEG) service and start an HPEG session with your payload.

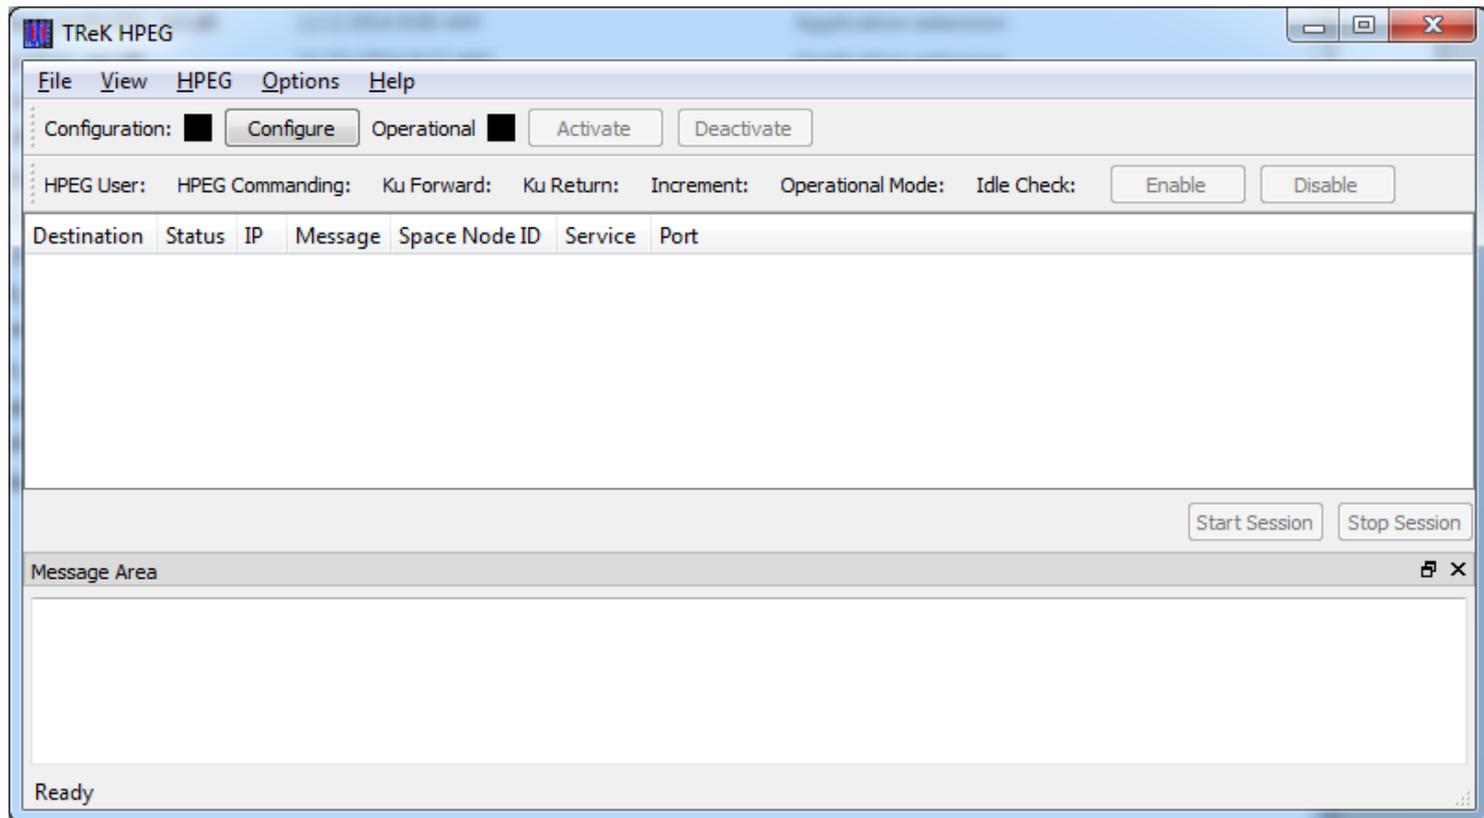



TReK HPEG Configure Dialog


- The Configure dialog provides the capability to enter configuration information needed to use the HPEG service.

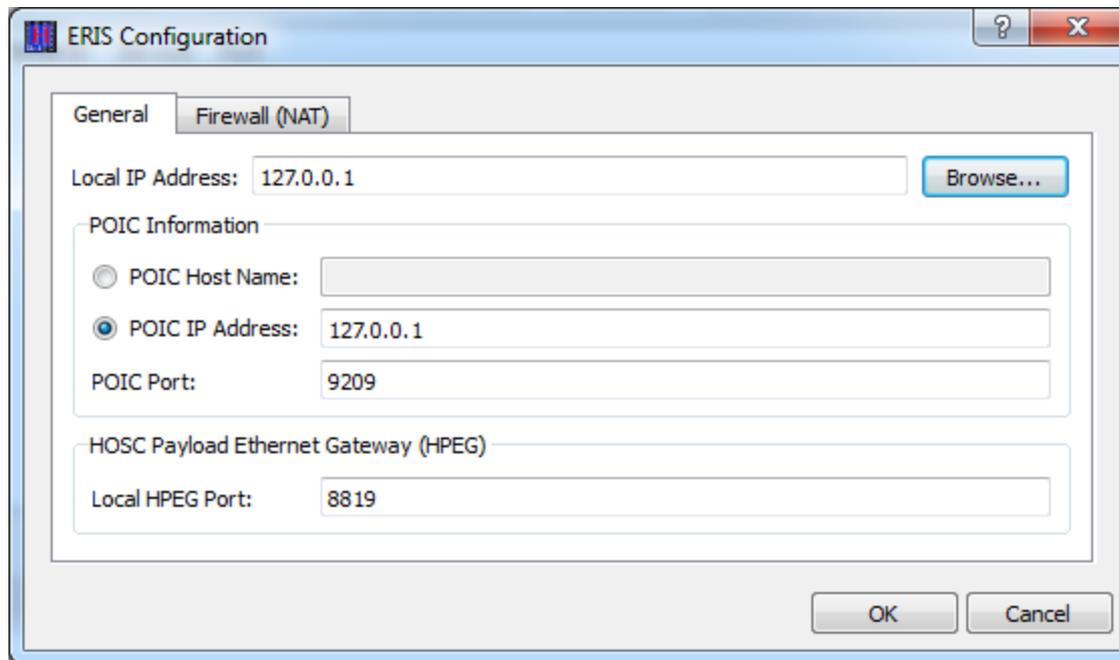



TReK HPEG Configure Dialog


- If you have a firewall and need to enter Network Address Translation information it can be entered on the Firewall tab.

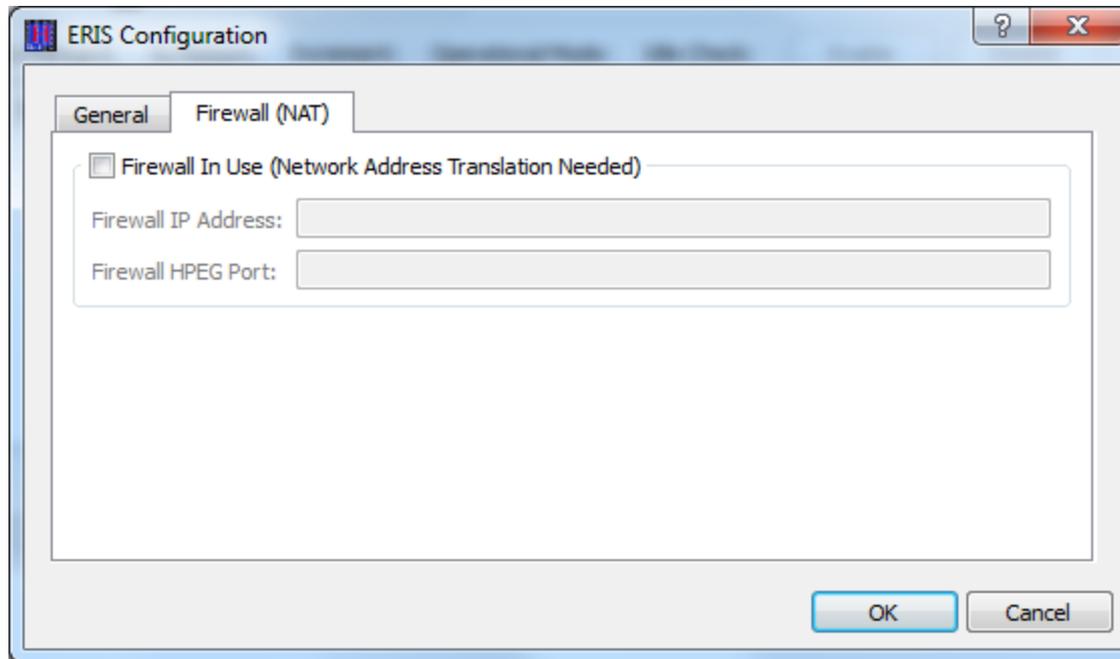



TReK HPEG Configured & Ready to Activate

- When you push the Activate button, a series of prompts will take you through the POIC login process (User ID, Password, Passcode, MOP, etc.). If you are registered to use CFDP or DTN this will include a prompt for Ground Node ID.

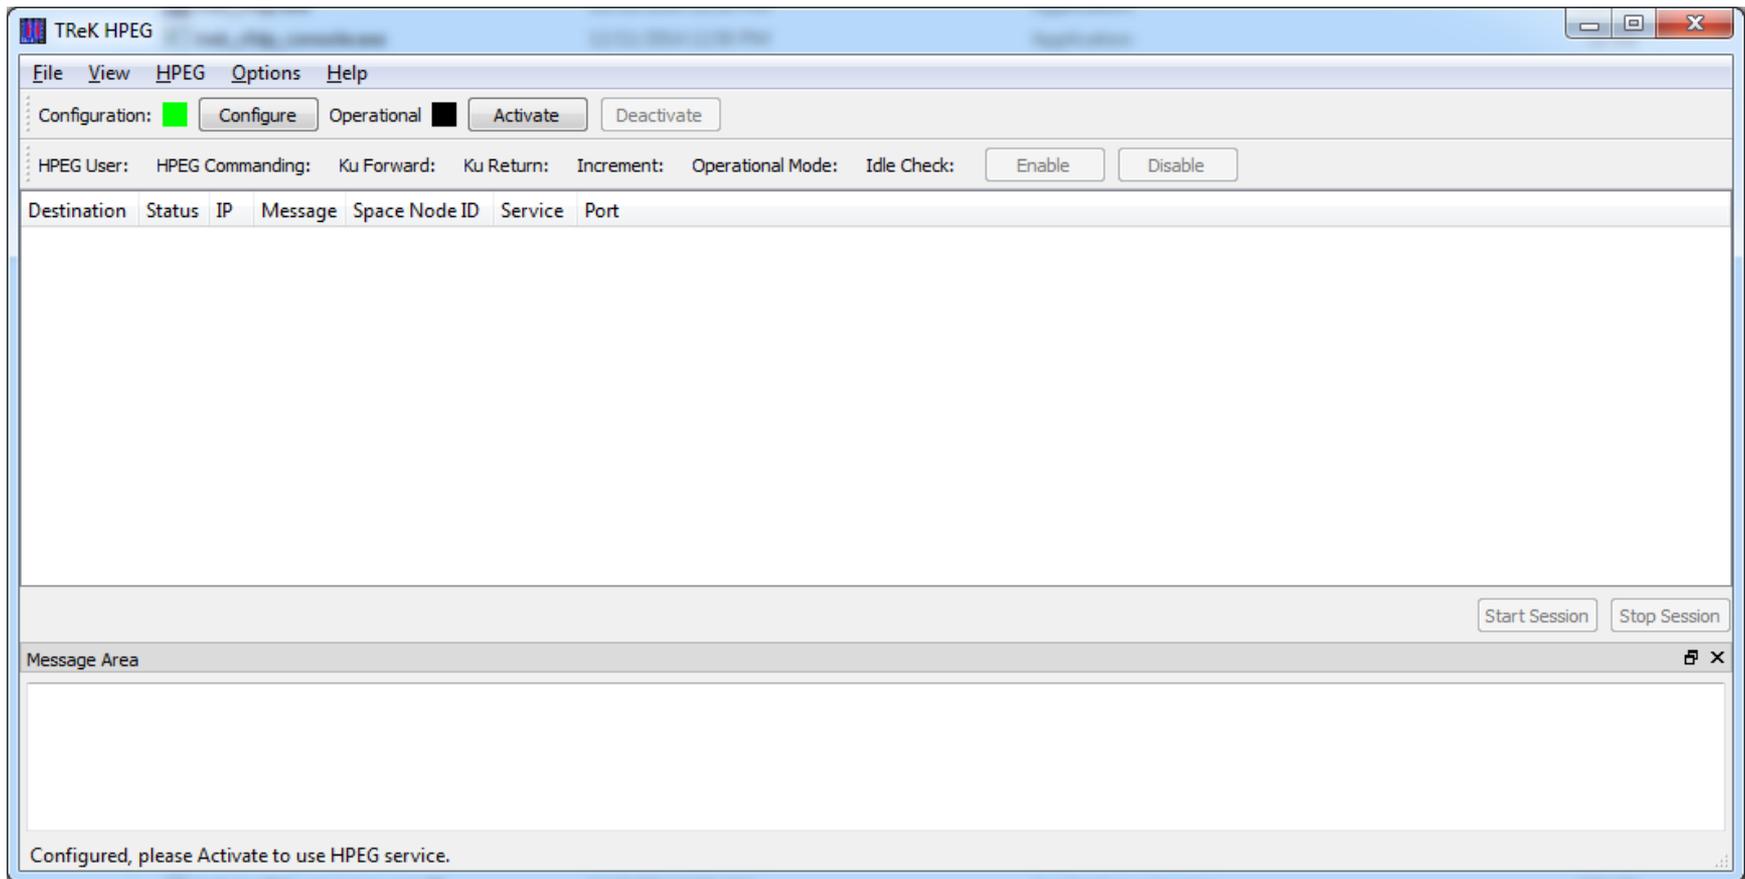



TReK HPEG Main Window

- This is the TReK HPEG application after a successful POIC login. This user has two payloads onboard: MylssPayload and SomewhereOverTheRainbow.

The screenshot shows the TReK HPEG application window. The title bar reads "TReK HPEG". The menu bar includes "File", "View", "HPEG", "Options", and "Help".

Configuration status: Configuration: ■ Operational ■

HPEG User: Enabled HPEG Commanding: Enabled Ku Forward: AOS Ku Return: LOS Increment: 41 Operational Mode: Flight Idle Check: Enabled

Ground Node ID: 345

Destination	Status	IP	Message	Space Node ID	Service	Port
▶ MylssPayload	Inactive					
▶ SomewhereOverTheRainbow	Inactive			2001		

Message Area

```
GMT 2015-01-25 14:22:57:201 Info: POIC Login Successful.  
GMT 2015-01-25 14:22:57:272 Info: Accepted connection for Socket 1.2.192.168.50.14.8819.3 IP Address: 192.168.50.14 Port: 2304  
GMT 2015-01-25 14:22:58:025 Info: User selected Ground Node ID 345  
GMT 2015-01-25 14:22:58:033 Info: Successfully activated support for HPEG.
```

HPEG Active



TReK HPEG Main Window

- In this picture, you can see the IP protocols that are available for use with the SomewhereOverTheRainbow payload.

TReK HPEG

File View HPEG Options Help

Configuration: ■ Configure Operational ■ Activate Deactivate

HPEG User: Enabled HPEG Commanding: Enabled Ku Forward: AOS Ku Return: LOS Increment: 41 Operational Mode: Flight Idle Check: Enabled Enable Disable

Ground Node ID: 345

Destination	Status	IP	Message	Space Node ID	Service	Port
▶ MyIssPayload	Inactive					
▲ SomewhereOverTheRainbow	Inactive			2001	ssh	22
					CFDP	4560

Start Session Stop Session

Message Area

GMT 2015-01-25 14:22:57:201 Info: POIC Login Successful.
GMT 2015-01-25 14:22:57:272 Info: Accepted connection for Socket 1.2.192.168.50.14.8819.3 IP Address: 192.168.50.14 Port: 2304
GMT 2015-01-25 14:22:58:025 Info: User selected Ground Node ID 345
GMT 2015-01-25 14:22:58:033 Info: Successfully activated support for HPEG.

HPEG Active



TReK HPEG Main Window

- In this picture, you can see the SomewhereOverTheRainbow destination is selected, and the Start Session button is available.

TReK HPEG

File View HPEG Options Help

Configuration: ■ Configure Operational ■ Activate Deactivate

HPEG User: Enabled HPEG Commanding: Enabled Ku Forward: AOS Ku Return: LOS Increment: 41 Operational Mode: Flight Idle Check: Enabled Enable Disable

Ground Node ID: 345

Destination	Status	IP	Message	Space Node ID	Service	Port
MyIssPayload	Inactive					
SomewhereOverTheRainbow	Inactive			2001		

Start Session Stop Session

Message Area

GMT 2015-01-25 14:28:20:332 Info: POIC Login Successful.
GMT 2015-01-25 14:28:20:396 Info: Accepted connection for Socket 1.2.192.168.50.14.8819.3 IP Address: 192.168.50.14 Port: 2362
GMT 2015-01-25 14:28:21:190 Info: User selected Ground Node ID 345
GMT 2015-01-25 14:28:21:199 Info: Successfully activated support for HPEG.

HPEG Active



TReK HPEG Main Window

- This picture shows an active session with the SomewhereOverTheRainbow destination. You can see the Proxy IP address in the IP column.

The screenshot shows the TReK HPEG Main Window interface. At the top, there is a menu bar with 'File', 'View', 'HPEG', 'Options', and 'Help'. Below the menu bar, there are several status indicators and buttons: 'Configuration: [Green Box] Configure', 'Operational [Green Box] Activate Deactivate', 'HPEG User: Enabled HPEG Commanding: Enabled Ku Forward: AOS Ku Return: LOS Increment: 41 Operational Mode: Flight Idle Check: Enabled Enable Disable', and 'Ground Node ID: 345'. The main area contains a table with columns: Destination, Status, IP, Message, Space Node ID, Service, and Port. The table has two rows: 'MyIssPayload' (Inactive) and 'SomewhereOverTheRainbow' (Active, IP: 192.168.1.25, Message: Successfully Initialized (0): Success! 2001). At the bottom right of the main area, there are 'Start Session' and 'Stop Session' buttons. Below the main area is a 'Message Area' with a scrollable log of messages: 'GMT 2015-01-25 14:22:57:201 Info: POIC Login Successful.', 'GMT 2015-01-25 14:22:57:272 Info: Accepted connection for Socket 1.2.192.168.50.14.8819.3 IP Address: 192.168.50.14 Port: 2304', 'GMT 2015-01-25 14:22:58:025 Info: User selected Ground Node ID 345', and 'GMT 2015-01-25 14:22:58:033 Info: Successfully activated support for HPEG.'. At the bottom left, it says 'HPEG Active'.

Destination	Status	IP	Message	Space Node ID	Service	Port
MyIssPayload	Inactive					
SomewhereOverTheRainbow	Active	192.168.1.25	Successfully Initialized (0): Success!	2001		

Message Area

```
GMT 2015-01-25 14:22:57:201 Info: POIC Login Successful.
GMT 2015-01-25 14:22:57:272 Info: Accepted connection for Socket 1.2.192.168.50.14.8819.3 IP Address: 192.168.50.14 Port: 2304
GMT 2015-01-25 14:22:58:025 Info: User selected Ground Node ID 345
GMT 2015-01-25 14:22:58:033 Info: Successfully activated support for HPEG.
```

HPEG Active



CFDP

- The CFDP protocol provides reliable transfer of files from one computer to another, and has been designed to work well over space links. It can be used to perform space to ground, ground to space, space to space, and ground to ground file transfers.
- CFDP requires a sender and a receiver. The sender and receiver must be configured and running at the same time to perform a file transfer. Each party is referred to as an “Entity”. The sender is an entity and the receiver is an entity. Each “Entity” must have a unique Entity ID. For example:



- If you choose to use the CFDP service, you will be given an Entity ID to use on your payload computer and an Entity ID to use on your ground computer. These are referred to as a Space Node ID and a Ground Node ID.



CFDP Options

- The TReK CFDP software provides support for CFDP over User Datagram Protocol (UDP) and CFDP over Bundle Protocol (BP).
- The CFDP over UDP configuration option is referred to as Native CFDP.
- In the Native CFDP configuration, the software uses UDP sockets with the Goddard Space Flight Center (GSFC) CFDP library that performs the CFDP work.
- The CFDP over BP configuration option is referred to as ION CFDP.
- In the ION CFDP configuration, the software communicates with the Jet Propulsion Lab (JPL) Interplanetary Overlay Network (ION) Delay Tolerant Networking (DTN) software which performs all the CFDP work.



CFDP Directives Supported

- The TReK CFDP software currently supports multiple CFDP Directives based on how the software is configured.

Directive	Description	Native	ION
append_file	append a file at the remote entity to another file at the remote entity.		✓
create_dir	create a directory at the remote entity.		✓
create_file	create an empty file at the remote entity.		✓
delete_file	delete a file at the remote entity.		✓
deny_dir	delete a directory at the remote entity. (like <i>remove_dir</i> , but does not fail if the directory does not exist)		✓
deny_file	delete a file at the remote entity. (like <i>delete_file</i> , but does not fail if the file does not exist)		✓
get	copy one file from the remote entity to the local entity.	✓	✓
message	send a text string to the remote entity.		✓
put	copy one file from the local entity to the remote entity.	✓	✓
remove_dir	delete a directory at the remote entity.		✓
rename_file	rename a file at the remote entity.		✓
replace_file	replace a file at the remote entity with another file at the remote entity.		✓



TReK CFDP Main Window

TReK CFDP -- Untitled

File View CFDP Options Help

Configuration: Configure Operational: Activate Deactivate

CFDP Commands

Action	Transmission	Source	Remote EID	Destination
--------	--------------	--------	------------	-------------

Add Row Remove Row Export List Import List

<< Show Directory Default Destination: None Clear All Restore All Execute All

Transactions

Transaction ID	Remote EID	Status	% Complete	Bytes Transferred	Source	Destination	Configuration	File Size
----------------	------------	--------	------------	-------------------	--------	-------------	---------------	-----------

Configure... Clear Pause Resume Cancel

Message Area



CFDP Configure Dialog

- Ground Configuration

Configure

Configuration: Native CFDP ION CFDP

Native CFDP Options

Local Entity ID: <Ground Node ID>

Remote Entities

Remote EID	Remote IP Address	Remote Port
<Space Node ID>	<Proxy IP Address>	4560

CFDP Socket Local IP Address: <Local IP Address> Browse...

CFDP Socket Local Port: 4560

CFDP Socket Queue Size: 1000

Ack Timeout (seconds): 5

Ack Limit: 10

Nak Timeout (seconds): 5

Nak Limit: 10

Inactivity Timeout (seconds): 300

Outgoing File Chunk Size (bytes): 16000

Aggregate File Transfer Rate (bits/sec): 10000000


Transaction Cycle Time Interval (milliseconds): 1

OK Cancel



CFDP Configure Dialog

- If you fill in the Default Remote EID and a Default Destination Path, this provides a way for the software to fill in these values when you use drag and drop.

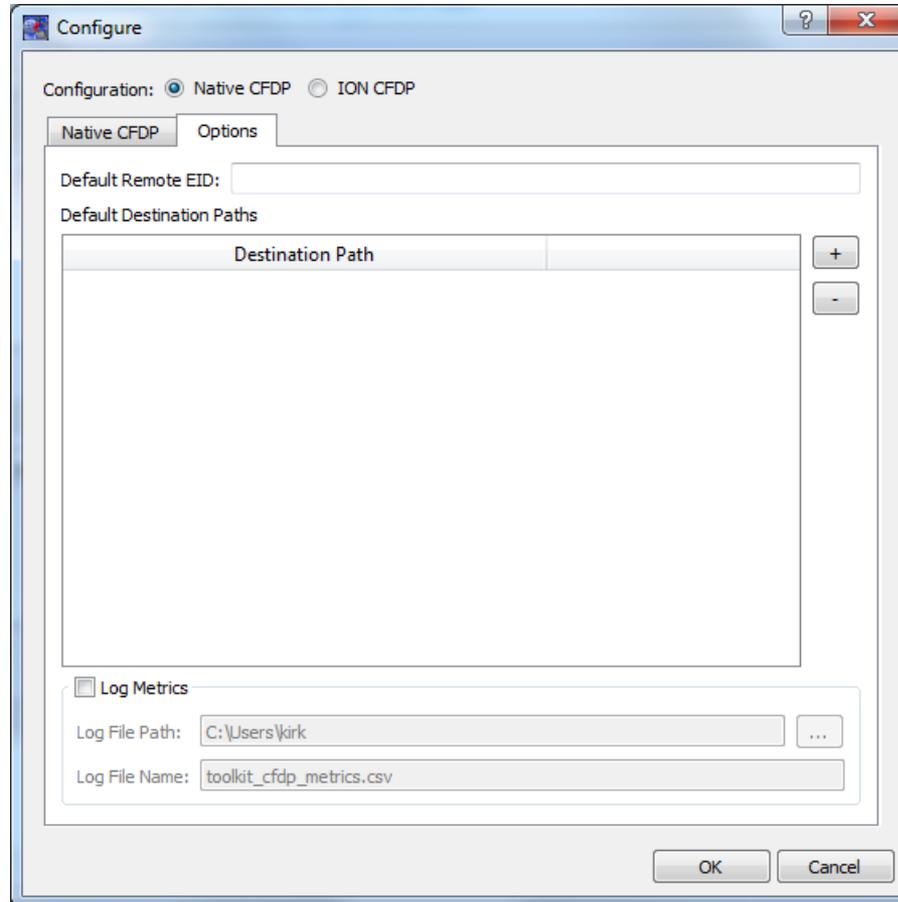



CFDP Main Window

TReK CFDP -- D:/michelle/cfdp_config_ivv

File View CFDP Options Help

Configuration: Configure Operational: Activate Deactivate

CFDP Commands

Action	Transmission	Source	Remote EID	Destination
put	class2	D:/cfdptest/bridge7.log	32965	C:/Users/kutest1/bridge7.log

<< Show Directory Default Destination: C:\Users\kutest1\ Clear All Restore All Execute All

Transactions

Transaction ID	Remote EID	Status	% Complete	Bytes Transferred	Source	Destination	Configuration	File Size
128.195_1	32965	Success	100	1027279	D:/cfdptest/1274-V2_Rev_CHH.pdf	C:/Users/kutest1/1274-V2_Rev_CHH.pdf	Sender	1027279
128.195_2	32965	Success	100	11	D:/cfdptest/cat3.txt	C:/Users/kutest1/cat3.txt	Sender	11


Configure... Clear Pause Resume Cancel

Message Area

```
GMT 2015-01-20 17:18:08:123 Info: Transaction 128.195_1 (D:/cfdptest/1274-V2_Rev_CHH.pdf -> C:/Users/kutest1/1274-V2_Rev_CHH.pdf): successful (cfdp_transceiver.cpp:1056)
GMT 2015-01-20 17:18:09:099 Info: Successfully requested file transfer.
GMT 2015-01-20 17:18:09:102 Info: Transaction started: 128.195_2 (cfdp_transceiver.cpp:472)
GMT 2015-01-20 17:18:09:102 Info: Transaction: 128.195_2 (D:/cfdptest/cat3.txt -> C:/Users/kutest1/cat3.txt) (cfdp_transceiver.cpp:505)
GMT 2015-01-20 17:18:09:672 Info: Transaction 128.195_2 (D:/cfdptest/cat3.txt -> C:/Users/kutest1/cat3.txt): successful (cfdp_transceiver.cpp:1056)
```



Configuring to use Native CFDP

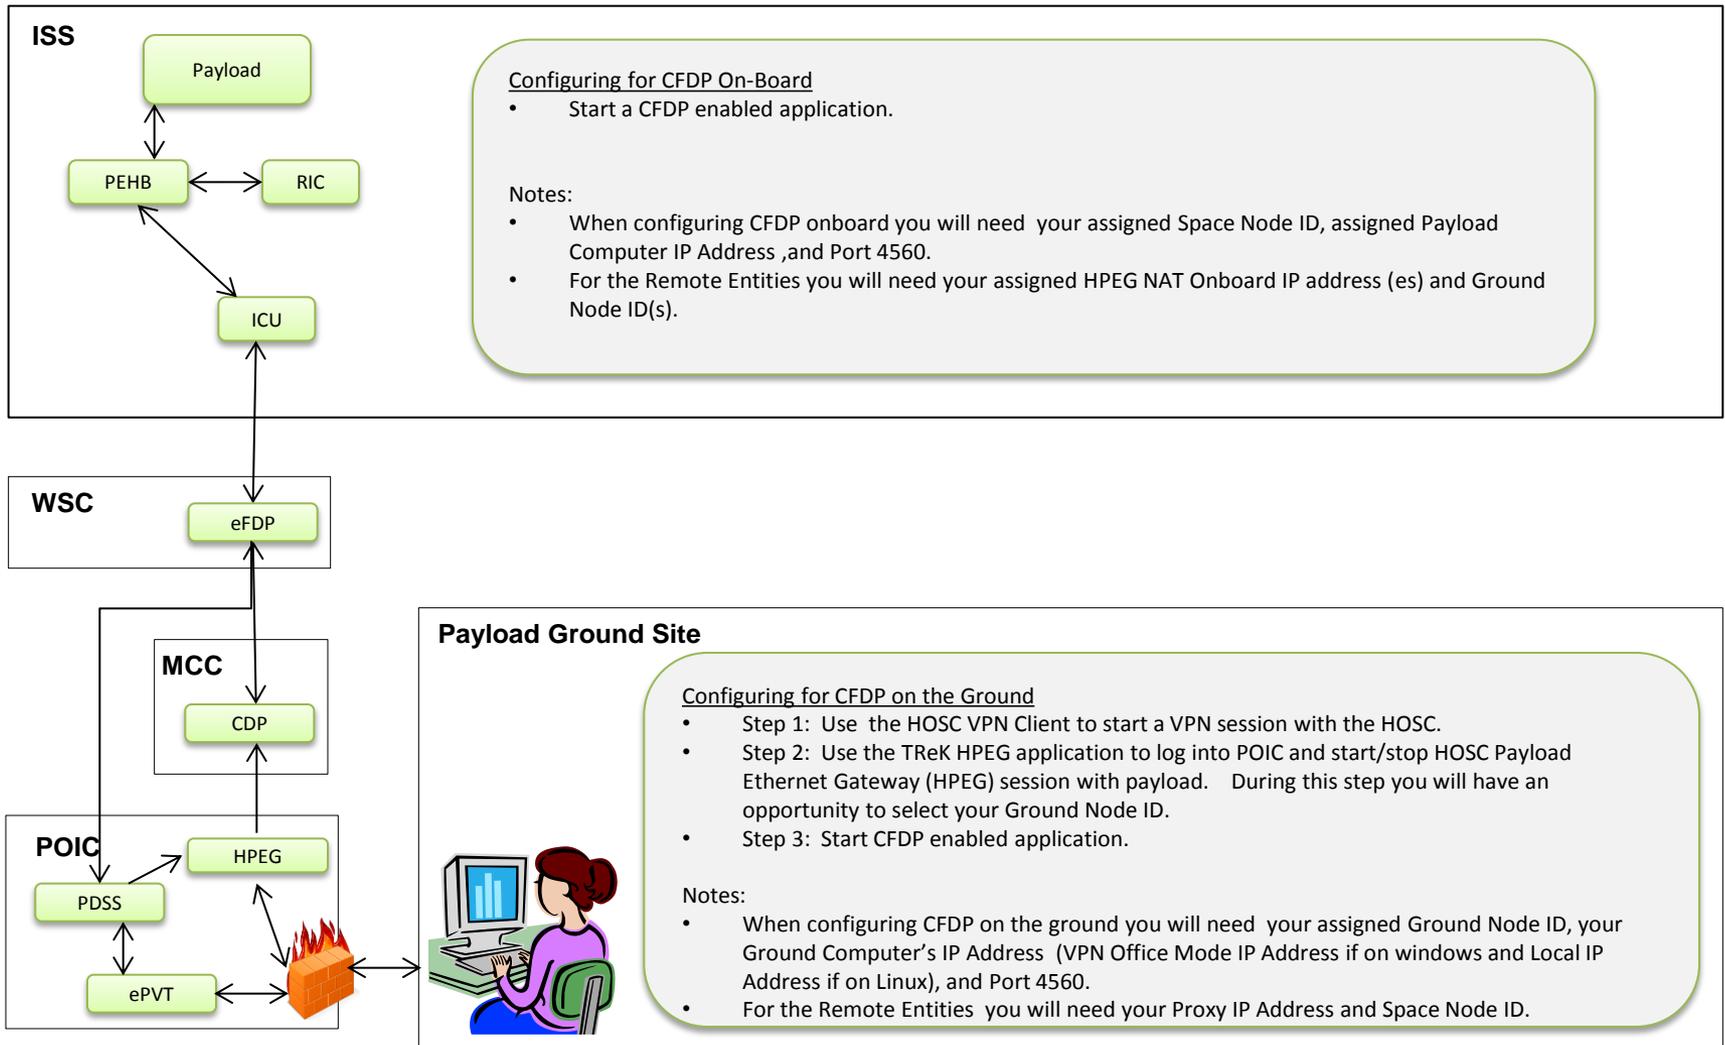




Delay Tolerant Network (DTN)

- A Delay Tolerant Network provides capabilities to communicate over networks where connectivity is not continuous or there is a long delay in communications.
- Delay or disruption in any path can cause problems in the transfer of data.
- The flight and payload computers of space systems must often build specialized code to store the data during periods of disruption and send it when a transmission link becomes available.
- If data is identified as lost on the receiving end, a means of requesting the retransmission of lost data must be provided.
- DTN can address these issues and alleviate the need for this type of work.



DTN Example


- A delay tolerant network is composed of multiple computers or nodes.
- Data sent between nodes are called bundles.
- Each node has the knowledge of other nodes with which it may directly communicate and when those communication links are available.

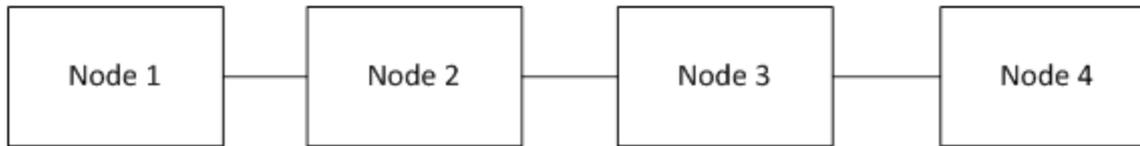

- Node 1 only knows how to communicate with Node 2.
- Node 1 knows when the communication link is available for Node 2.
- If Node 1 needs to send data (bundles) to either Node 3 or Node 4, then it must send the bundle through a gateway. In this case the gateway is Node 2. Any DTN node that routes data from one DTN node to another DTN node is considered a gateway.
- Node 1 does not need to know when the communication links are available from Node 2 to Node 3 or Node 3 to Node 4. It only knows that by sending the bundles to Node 2 the bundles will get to the other nodes.
- DTN can be used as a store and forward network since end-to-end communication is not always possible. A node can send bundles to another node that will store the bundles until it is possible to forward it to the next node.



ISS DTN Configuration

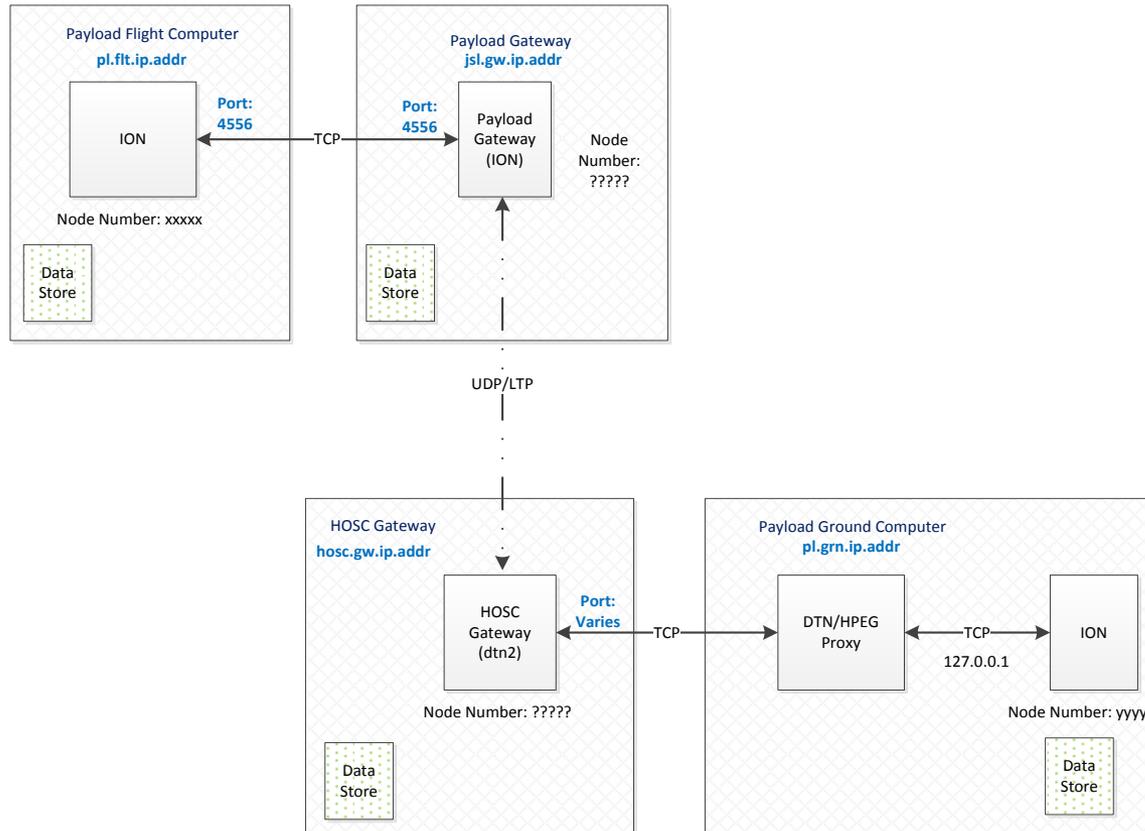




Example Steps for a Payload Using DTN (ION)

- Step 1: Generate ION Configuration Files (TReK IONconfig)
- Step 2: Run the ION Software (TReK IONizer, IONizer API, startion.bat/startion.sh)
- Step 3: Run one or more DTN Enabled Application (e.g. TReK CFDP over BP, other DTN applications).



TReK IONconfig Application

- This is the TReK IONconfig application main window. This application is used to create ION configuration files. This diagram shows two nodes.

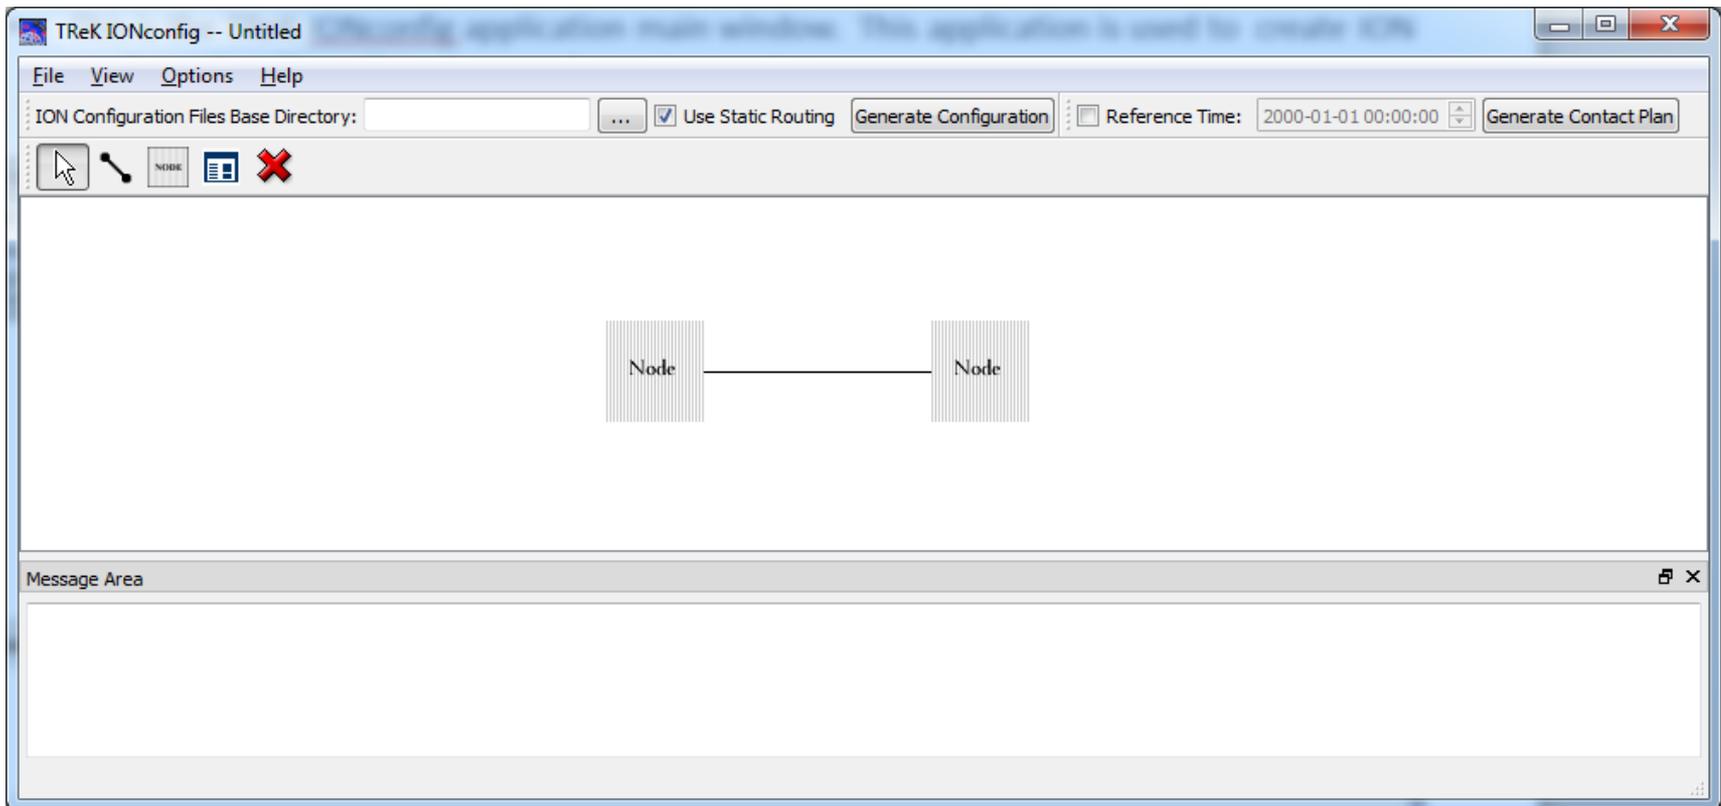



IONconfig Modify Node Dialog

Modify Node

General Configuration Administration Bundle Protocol CFDP Security

Node Number: 1

Node IP Address: 192.168.1.1

Node Name: Ground

Output: Echo stdout to Log File Write Watch Characters

Service Number (int)	Receipt Action
----------------------	----------------

+
-

OK Cancel



TReK IONconfig Application

The screenshot shows the TReK IONconfig application window. The title bar reads "TReK IONconfig -- Untitled". The menu bar includes "File", "View", "Options", and "Help". The main interface features a toolbar with icons for a mouse, a connection line, a node, a document, and a red 'X'. Below the toolbar, the "ION Configuration Files Base Directory" is set to "D:\testconfig\". There are two buttons: "Generate Configuration" and "Generate Contact Plan". A "Reference Time" field is set to "2000-01-01 00:00:00". The central workspace contains a diagram with two nodes: "Ground (Node 1)" and "Space (Node 2)", connected by a horizontal line. At the bottom, a "Message Area" displays the text: "GMT 2015-01-29 12:57:22:623 Info: Configuration files generated in directory D:\testconfig\,".



Computer > Data (D:) > testconfig > node_1

Search node_1

Organize Include in library Share with Burn New folder

Name	Date modified	Type	Size
contact_plan.ionrc	1/29/2015 6:57 AM	IONRC File	1 KB
deletesdr.bat	1/29/2015 6:57 AM	Windows Batch File	1 KB
deletesdr.sh	1/29/2015 6:57 AM	SH File	1 KB
process_temp.txt	1/29/2015 6:57 AM	Text Document	1 KB
proxy.bprc	1/29/2015 6:57 AM	BPRC File	1 KB
proxy.ipnrc	1/29/2015 6:57 AM	IPNRC File	1 KB
proxy_available.txt	1/29/2015 6:57 AM	Text Document	1 KB
renamelog.bat	1/29/2015 6:57 AM	Windows Batch File	1 KB
renamelog.sh	1/29/2015 6:57 AM	SH File	1 KB
start.bprc	1/29/2015 6:57 AM	BPRC File	1 KB
start.cfdprc	1/29/2015 6:57 AM	CFDPRC File	1 KB
start.ionconfig	1/29/2015 6:57 AM	IONCONFIG File	1 KB
start.ionrc	1/29/2015 6:57 AM	IONRC File	1 KB
start.ionsecrc	1/29/2015 6:57 AM	IONSECRC File	1 KB
start.ipnrc	1/29/2015 6:57 AM	IPNRC File	1 KB
startion.bat	1/29/2015 6:57 AM	Windows Batch File	2 KB
startion.sh	1/29/2015 6:57 AM	SH File	1 KB
stop.ionrc	1/29/2015 6:57 AM	IONRC File	1 KB
stopion.bat	1/29/2015 6:57 AM	Windows Batch File	1 KB
stopion.sh	1/29/2015 6:57 AM	SH File	1 KB

20 items



Files Generated By IONconfig for a Node

ION Configuration File	Description
<code>contact_plan.ionrc</code>	Contact plan for the entire network. This plan is only used for nodes with LTP. The ground and payload nodes will use static routing.
<code>proxy.bprc</code>	For nodes where a proxy is used, this file replaces the start.bprc file.
<code>proxy.ipnrc</code>	For nodes where a proxy is used, this file replaces the start.ipnrc file.
<code>start.bprc</code>	Configuration information for the Bundle Protocol. The only changes expected for some payloads is the addition of unique service numbers for DTN enabled applications (NOTE: CFDP and echo service numbers are automatically generated as needed).
<code>start.cfdprc</code>	Configuration information for the CFDP protocol. The defaults provided should be sufficient.
<code>start.ionconfig</code>	Configuration information for the SDR. The location and size of the SDR should be changed from the defaults.
<code>start.ionrc</code>	Configuration information for ION. The provided defaults should be sufficient.
<code>start.ionsecrc</code>	Configuration information for ION security. Only starts the security service to prevent unnecessary message logging.
<code>start.ipnrc</code>	Configuration information for routing bundles. All of the information in this file is generated automatically including static routing of bundles as needed.
<code>stop.ionrc</code>	Configuration file needed to properly shut down ION without errors.




Files Generated By IONconfig for a Node

Other Files	Description
<code>change_ip_addr.bat/change_ip_addr.sh</code>	These scripts are used to change IP addresses when reconnecting to the HPEG system.
<code>chk_node_num.bat/chk_node_num.sh</code>	For nodes connecting to the HOSC DTN node, these scripts ensure that the node numbers used in the configuration are compatible with the node numbers identified by the HOSC interface.
<code>deletesdr.bat/deletesdr.sh</code>	Operating specific script to delete the SDR for a node. This script should only be executed when the SDR is corrupted.
<code>process_temp.txt</code>	A text file containing a list of all of the expected processes based on the ION configuration information. TReK will use this list to monitor for missing processes.
<code>proxy_available.txt</code>	A text file containing either YES or NO to indicate a proxy is available for this configuration.
<code>renamelog.bat/renamelog.sh</code>	Operating specific script to rename the ION log file. The file is renamed to include a timestamp and a new ion.log file is generated.
<code>startion.bat/startion.sh</code>	Operating specific script to start the ION processes. This script is used by the TReK IONizer application and can also be run from the command line.
<code>stopion.bat/stopion.sh</code>	Operating specific script to stop the ION processes.



TReK IONconfig Application

- This diagram shows the ISS DTN configuration. You can use this configuration to produce the ION configuration files you need for your onboard node and your ground node. TReK provides a template file for this configuration.

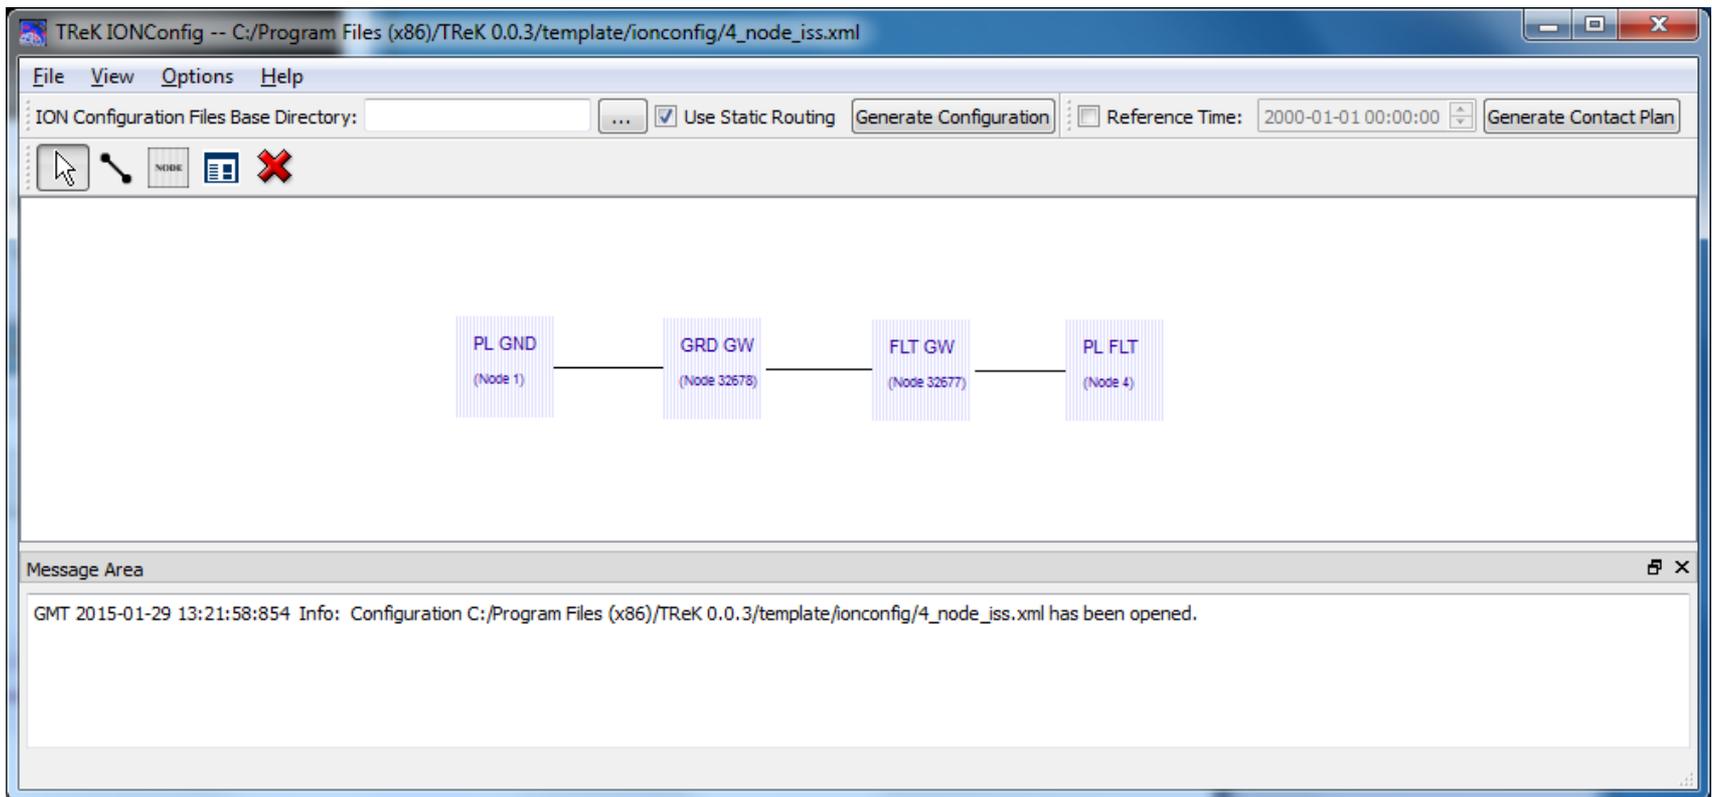



Files Generated By IONconfig for a Node

The screenshot shows a Windows Explorer window with the address bar set to 'Computer > Data (D:) > issconfig > node_1'. The left pane shows a tree view with 'node_1' selected. The main pane displays a list of 24 files with columns for Name, Date modified, Type, and Size.

Name	Date modified	Type	Size
change_ip_addr.bat	1/28/2015 12:05 PM	Windows Batch File	11 KB
change_ip_addr.sh	1/28/2015 12:05 PM	SH File	1 KB
chk_node_num.bat	1/28/2015 12:05 PM	Windows Batch File	7 KB
chk_node_num.sh	1/28/2015 12:05 PM	SH File	7 KB
contact_plan.ionrc	1/28/2015 12:05 PM	IONRC File	1 KB
deletesdr.bat	1/28/2015 12:05 PM	Windows Batch File	1 KB
deletesdr.sh	1/28/2015 12:05 PM	SH File	1 KB
process_temp.txt	1/28/2015 12:05 PM	Text Document	1 KB
proxy.bprc	1/28/2015 12:05 PM	BPRC File	1 KB
proxy.ipnrc	1/28/2015 12:05 PM	IPNRC File	1 KB
proxy_available.txt	1/28/2015 12:05 PM	Text Document	1 KB
renamelog.bat	1/28/2015 12:05 PM	Windows Batch File	1 KB
renamelog.sh	1/28/2015 12:05 PM	SH File	1 KB
start.bprc	1/28/2015 12:05 PM	BPRC File	1 KB
start.cfdprc	1/28/2015 12:05 PM	CFDPRC File	1 KB
start.ionconfig	1/28/2015 12:05 PM	IONCONFIG File	1 KB
start.ionrc	1/28/2015 12:05 PM	IONRC File	1 KB
start.ionsecrc	1/28/2015 12:05 PM	IONSECRC File	1 KB
start.ipnrc	1/28/2015 12:05 PM	IPNRC File	1 KB
startion.bat	1/28/2015 12:05 PM	Windows Batch File	2 KB
startion.sh	1/28/2015 12:05 PM	SH File	1 KB
stop.ionrc	1/28/2015 12:05 PM	IONRC File	1 KB
stopion.bat	1/28/2015 12:05 PM	Windows Batch File	1 KB
stopion.sh	1/28/2015 12:05 PM	SH File	1 KB



TReK HPEG

- This is the TReK HPEG application after a successful POIC login. HOSC DTN information is displayed in the toolbar. The SomewhereOverTheRainbow destination lists DTN as one of the services supported.

The screenshot shows the TReK HPEG application window. The title bar reads "TReK HPEG". The menu bar includes "File", "View", "HPEG", "Options", and "Help".

Configuration: ■ Operational ■

HPEG User: Enabled HPEG Commanding: Enabled Ku Forward: AOS Ku Return: LOS Increment: 41 Operational Mode: Flight Idle Check: Enabled

Ground Node ID: 345 HOSC DTN Node Number: 65535 HOSC DTN Node IP Address: 192.168.100.101 HOSC DTN Node Port: 2014

Destination	Status	IP	Message	Space Node ID	Service	Port
MyIssPayload	Inactive					
SomewhereOverTheRainbow	Inactive			2001	ssh	22
					CFDP	4560
					DTN	

Message Area

```
GMT 2015-01-12 15:22:00:971 Info: POIC Login Successful.
GMT 2015-01-12 15:22:01:053 Info: Accepted connection for Socket 1.2.127.0.0.1.8819.3 IP Address: 127.0.0.1 Port: 14620
GMT 2015-01-12 15:22:01:771 Info: User selected Ground Node ID 345
GMT 2015-01-12 15:22:01:782 Info: Successfully activated support for HPEG.
```

HPEG Active



TReK IONizer

The screenshot shows the TReK IONizer application window. The title bar reads "TReK IONizer". The menu bar includes "File", "View", "ION", "Options", and "Help". Below the menu bar, there is a text field for "ION Configuration Files" with the path "C:\jon_config_files\node_1535\" and a browse button "...". To the right of this field is a green square labeled "Operational:" and three buttons: "Start ION", "Stop ION", and "Delete SDR".

Below the configuration area, there are two tabs: "Monitor" (selected) and "Output". The "Monitor" tab displays a log table with the following columns: "Time", "Category", and "Message".

Time	Category	Message
2015-00-19 15:10:04	Info	bputa input has started.
2015-00-19 15:10:04	Info	bputa is running.
2015-00-19 15:10:04	Info	cfdpcli is running.
2015-00-19 15:10:04	Info	Stopping cfdpadmin.
2015-00-19 15:10:02	Info	udpcli is running, spec=[127.0.0.1:4556].
2015-00-19 15:10:02	Info	udpclo is running.
2015-00-19 15:10:02	Info	ipnadminep is running.
2015-00-19 15:10:02	Info	ipnfw is running.
2015-00-19 15:10:02	Info	bpclock is running.
2015-00-19 15:10:02	Info	Stopping bpadmin.
2015-00-19 15:10:02	Info	Bundle security is enabled.
2015-00-19 15:10:00	Info	ionwarn finished.

A "Clear" button is located at the bottom right of the log area.



TReK CFDP Configured with ION CFDP

Configure

Configuration: Native CFDP ION CFDP

ION CFDP Options

Lifespan (seconds): 86400

Bundle Protocol Class of Service: Standard Priority

Expedited Priority Ordinal: 0

Transmission Mode: Assured with Custody Transfer

Criticality: Not Critical

Transaction Result Message: True Timeout (seconds): 300

OK Cancel



TReK CFDP

The screenshot shows the TReK CFDP software interface. At the top, there is a menu bar with 'File', 'View', 'CFDP', 'Options', and 'Help'. Below the menu bar, there are status indicators for 'Configuration' (green square) and 'Operational' (black square), along with 'Configure', 'Activate', and 'Deactivate' buttons.

The main area is divided into two sections: 'CFDP Commands' and 'Transactions'.

CFDP Commands

Action	Transmission	Source	Remote EID	Destination
put	////	C:/Desperado.mp3	9000	/home/dave/Desperado.mp3

Buttons for 'Add Row', 'Remove Row', 'Export List', and 'Import List' are located to the right of the table. Below the table, there is a '<< Show Directory' button, a 'Default Destination' dropdown menu set to '/home/dave', and 'Clear All', 'Restore All', and 'Execute All' buttons.

Transactions


Transaction ID	Remote EID	Status	% Complete	Bytes Transferred	Source	Destination	Configuration	File Size
----------------	------------	--------	------------	-------------------	--------	-------------	---------------	-----------

Buttons for 'Configure...', 'Clear', 'Pause', 'Resume', and 'Cancel' are located below the table.

At the bottom, there is a 'Message Area' which is currently empty.



Configuring to use DTN

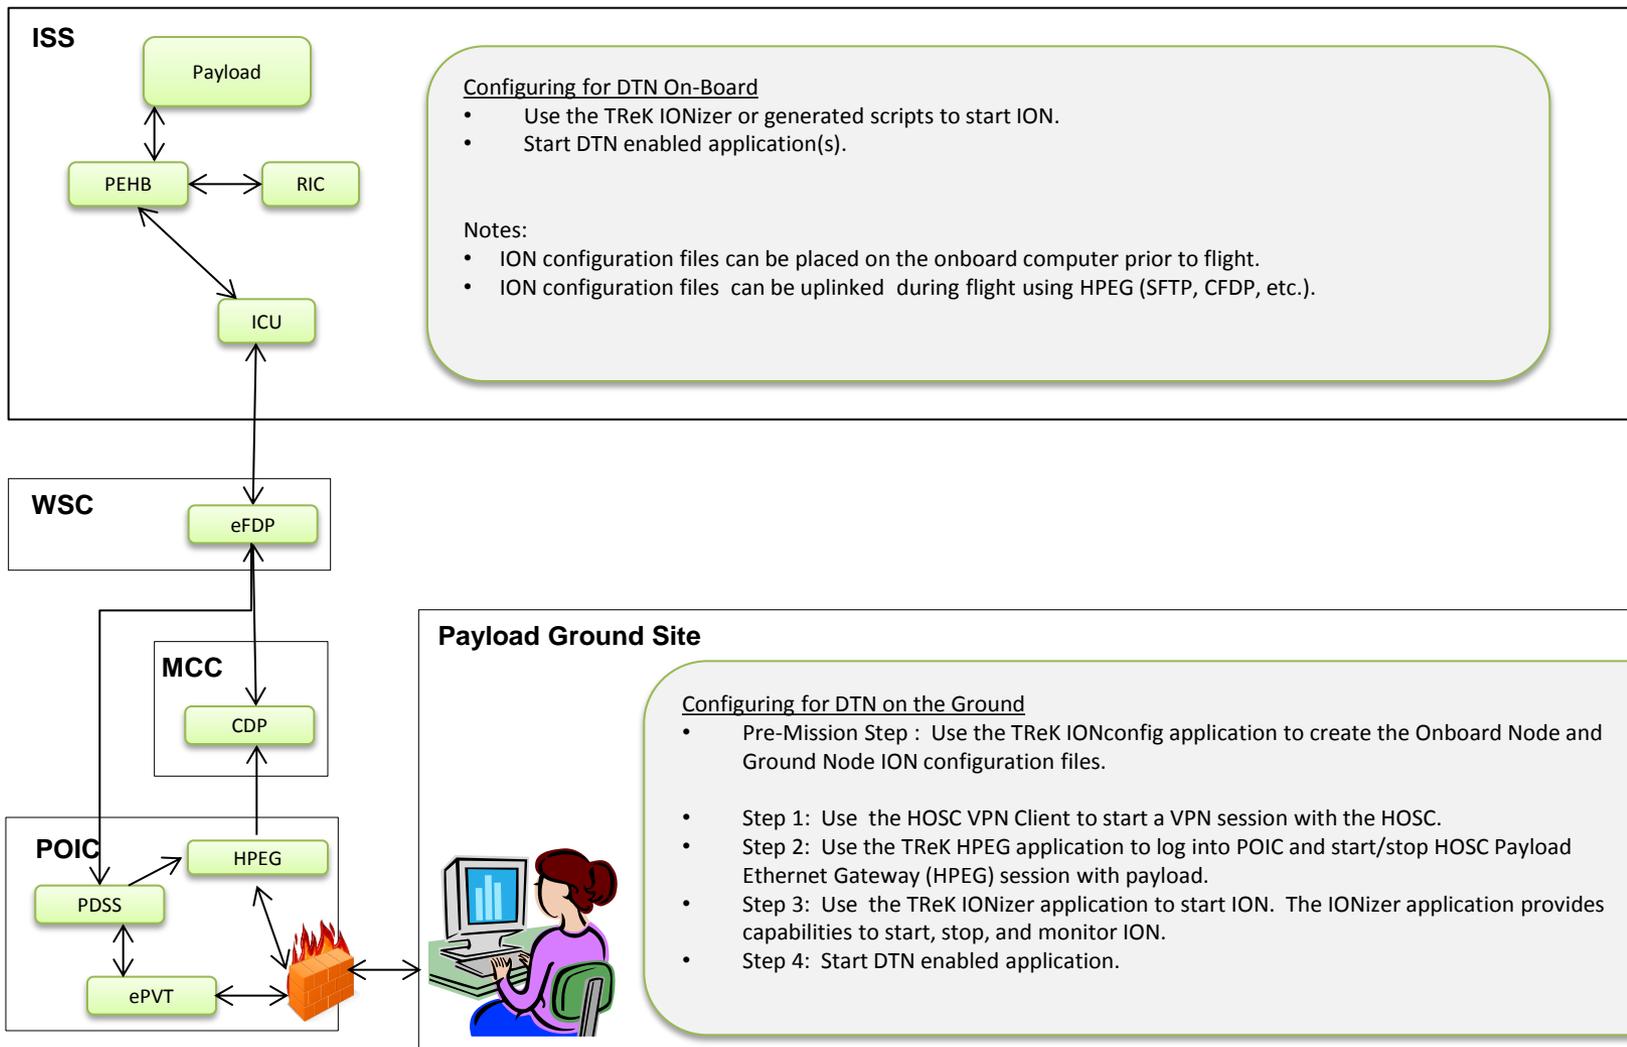



Point of Contact

Name: Michelle Schneider
Phone: (256) 544-1535
Fax: (256) 544-9353
E-Mail: Michelle.Schneider@nasa.gov
Address: Building 4663, EO50
Huntsville, AL 35812

TReK E-Mail: trek.help@nasa.gov
TReK Web Site: <http://trek.msfc.nasa.gov>